 


Инструкция по сборке


София

Шкаф распашной - 37












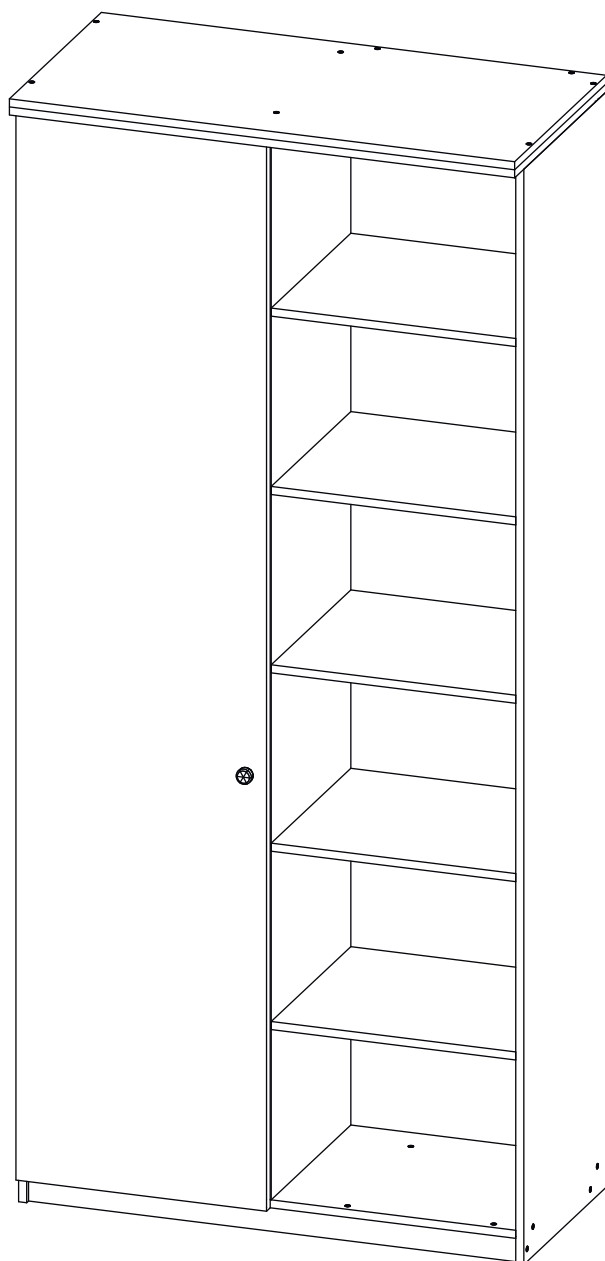


Детали




Поз.	Наименование	Кол-во	Длина	Ширина
1	Дверь	1	2114	496
2	Щит ЛДСП	1	2102	484
3	Крыша	1	1000	500
4	Бок левый	1	2168	450
5	Бок правый	1	2168	450
6	Перегородка	1	2102	450
7	Дно	1	968	450
8	Полка	1	468	450
9	Полка	5	484	433
10	р/ж	1	468	200
11	Цоколь	2	968	50
12	з/с	1	2148	496

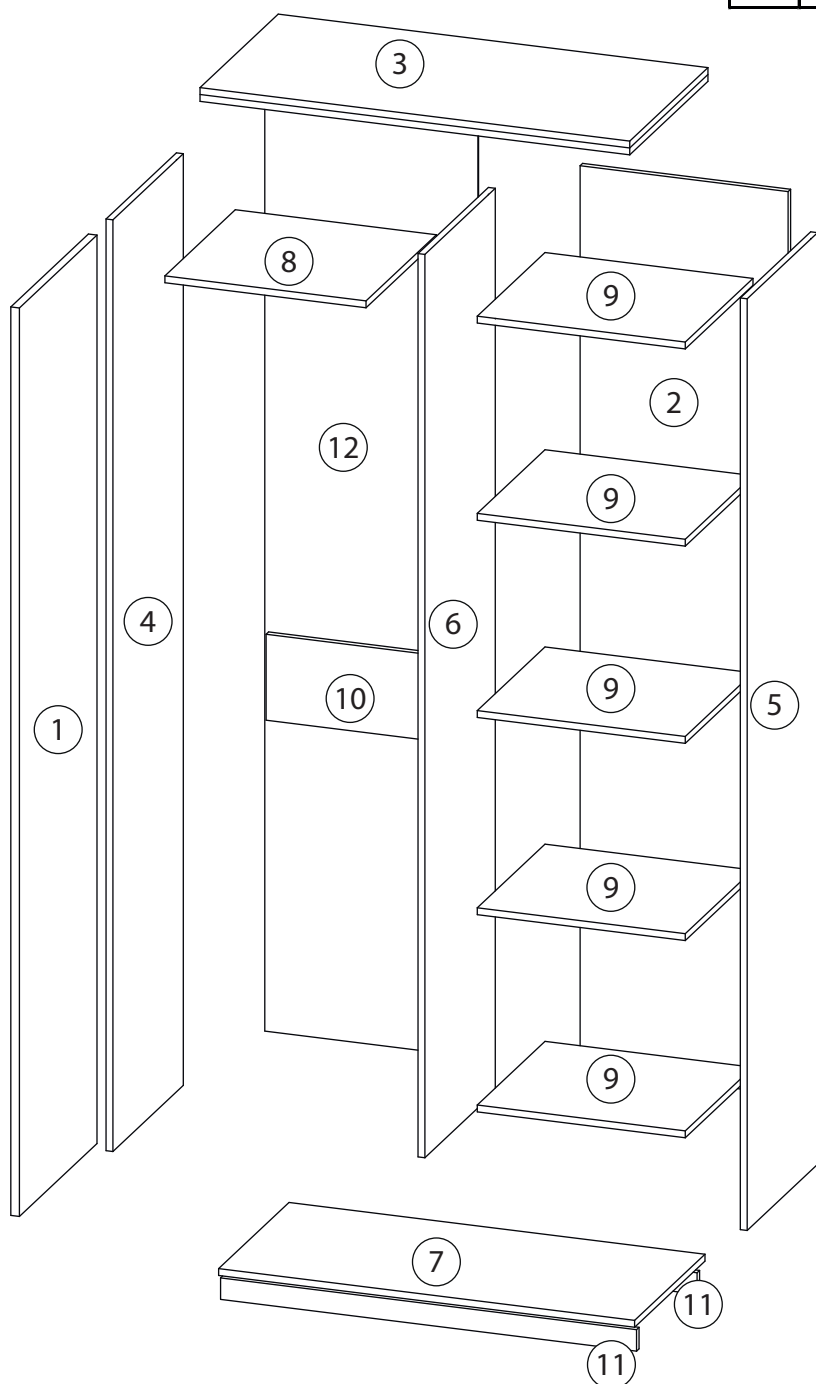 




Фурнитура

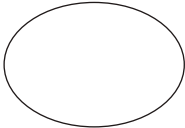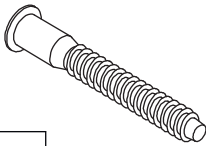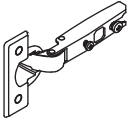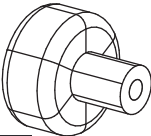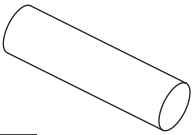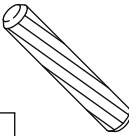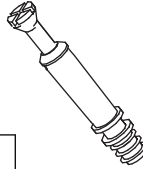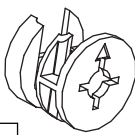            				
13	14	15	16	17
<u>Заглушка</u> <u>Ø13</u>	<u>Заглушка</u> <u>Ø17-20</u>	<u>Евровинт 6,3x13</u>	<u>Евровинт 7x50</u>	<u>Гвоздь 1,6x25</u>
				
18	19	20	21	22
<u>Саморез 3,5x16</u>	<u>Петля накладная</u>	<u>Стяжка VB35</u>	<u>Винт для стяжки</u> <u>VB35</u>	<u>Ручка кнопка</u>
				
23	24	25	26	27
<u>Штангодержатель</u>	<u>Штанга</u>	<u>Саморез 3,5x30</u>	<u>Шкант бук</u>	<u>Шток эксцентрика</u>
				
28				
<u>Эксцентрик</u>				

  
 
1

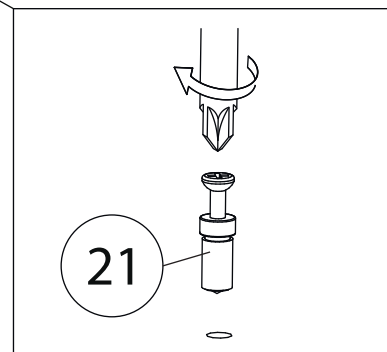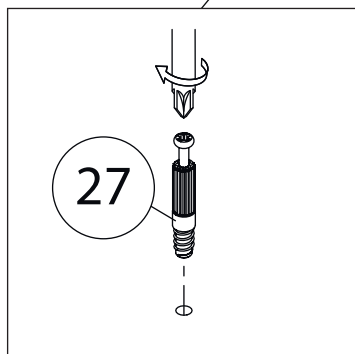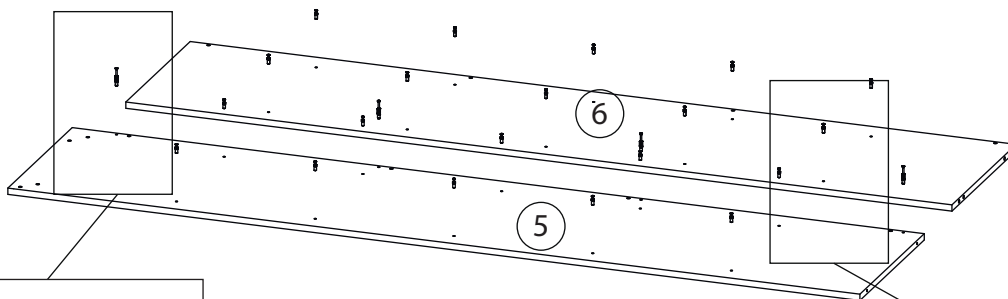


2

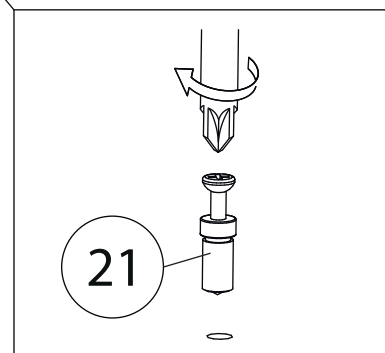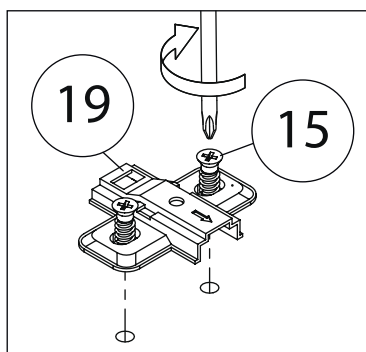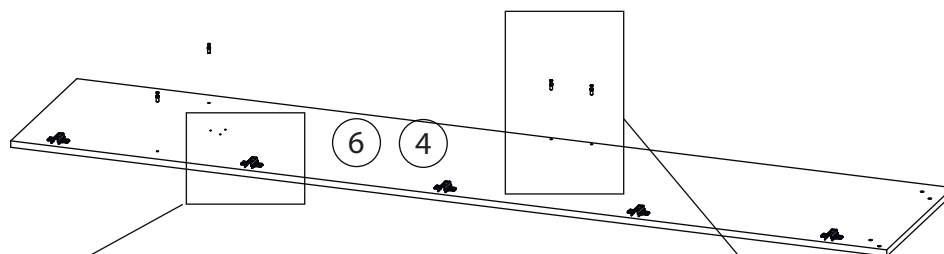   


3

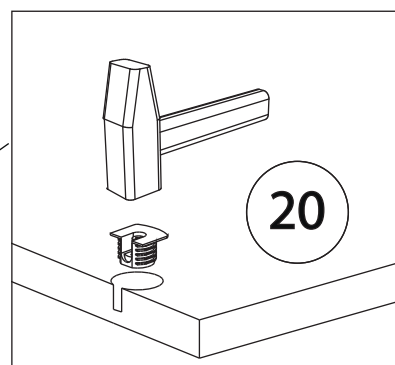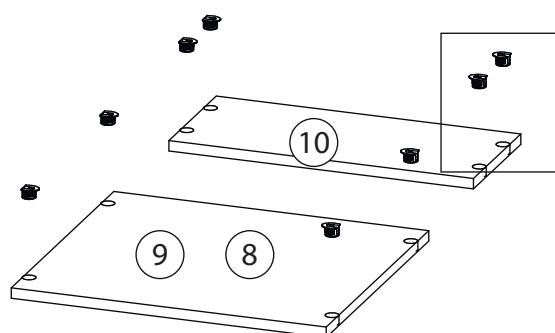  


4

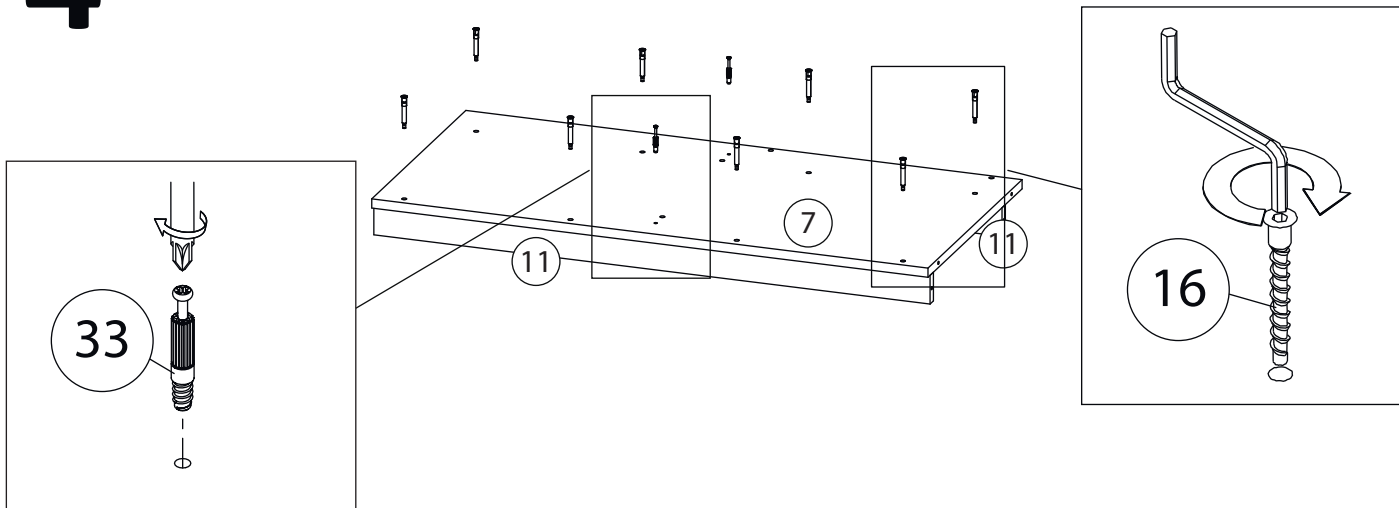 


5

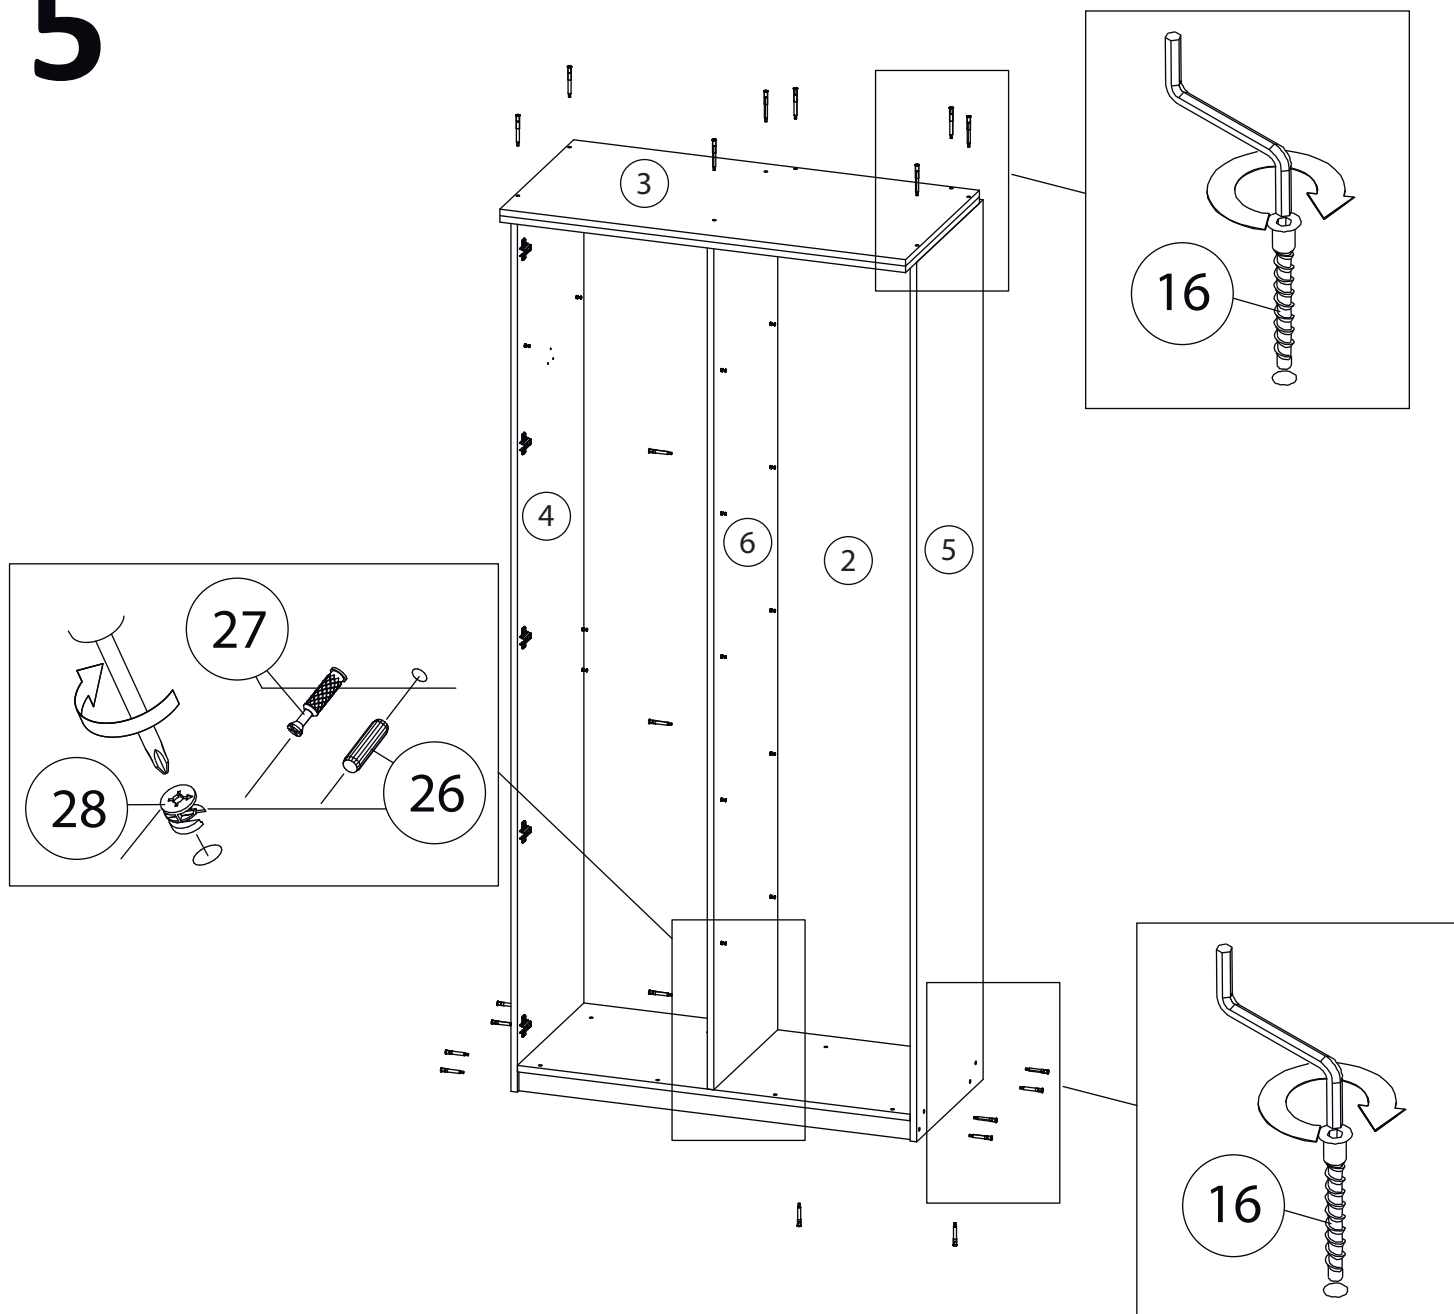 


6

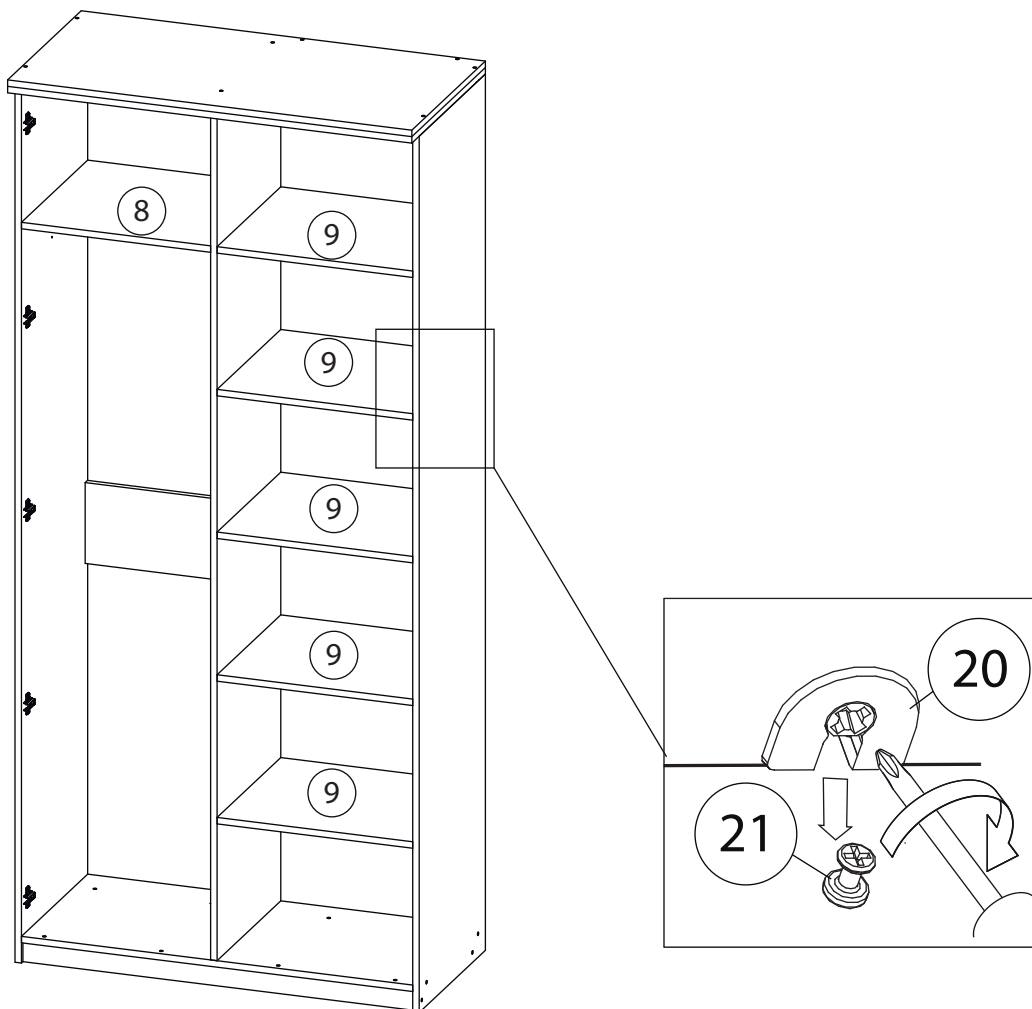 


7

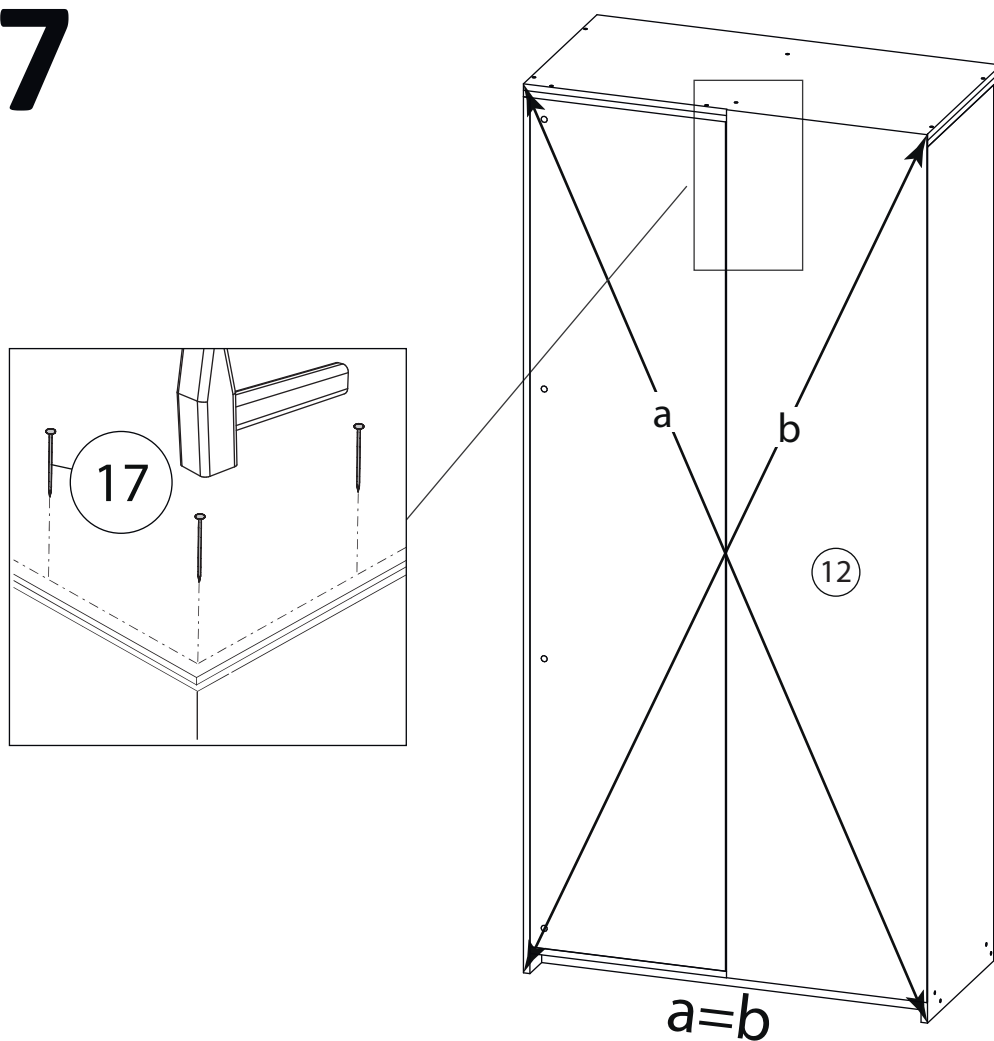 


8

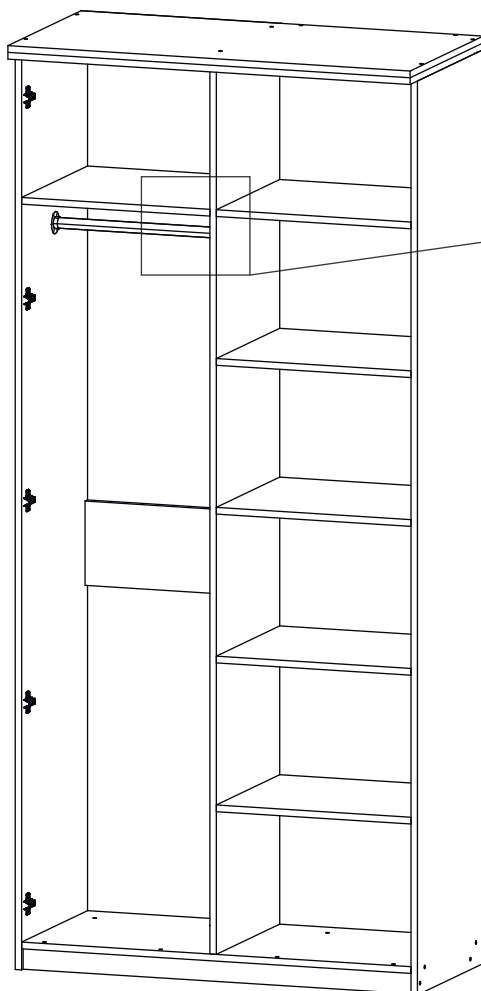 


9

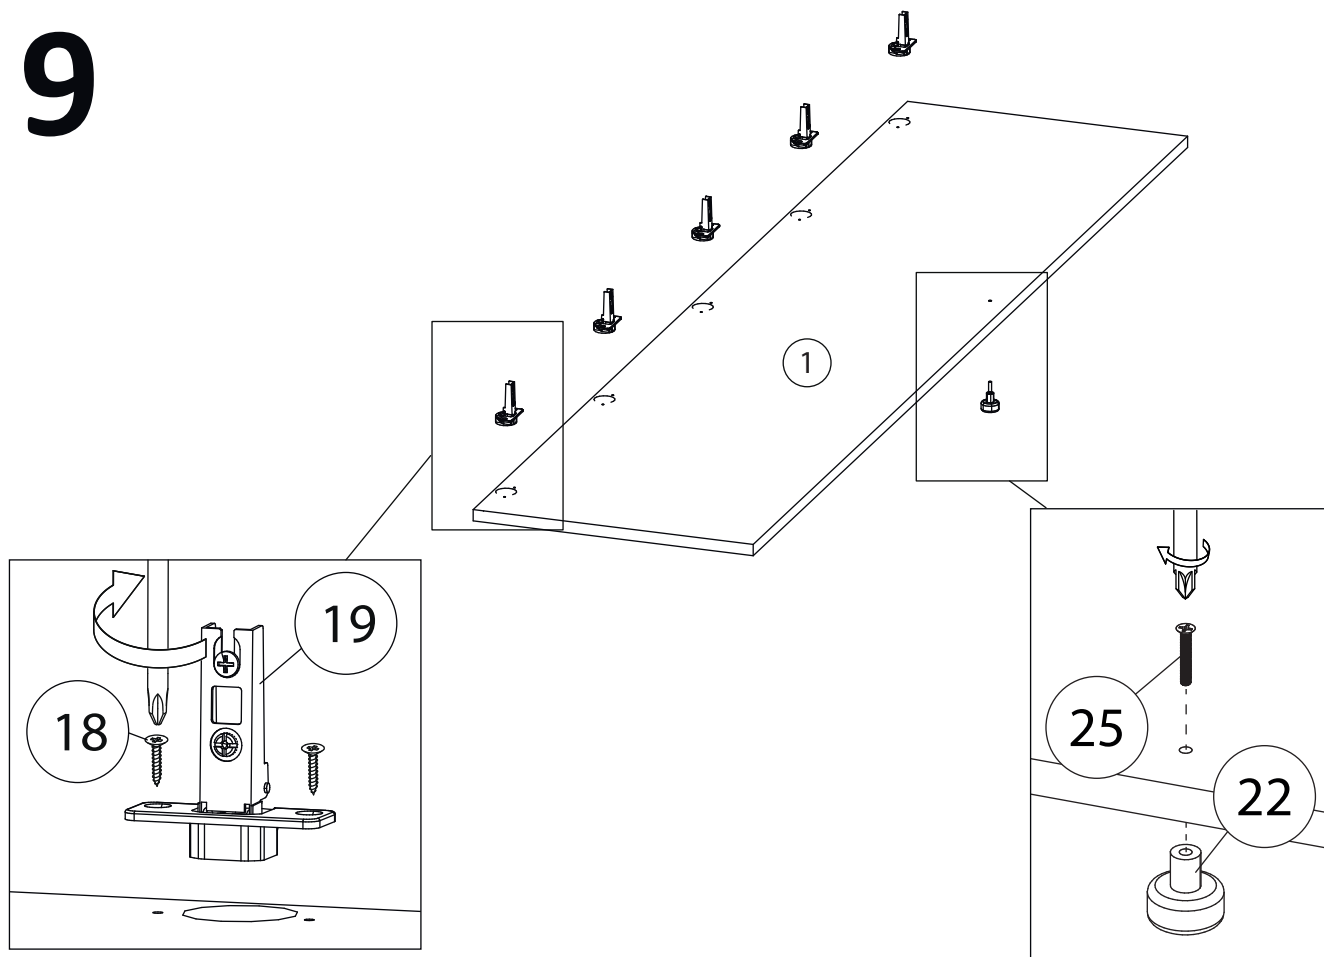 


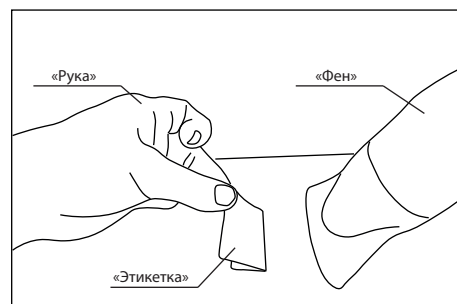 

 Удалить с детали этикетки со штрихкодом при помощи фена.

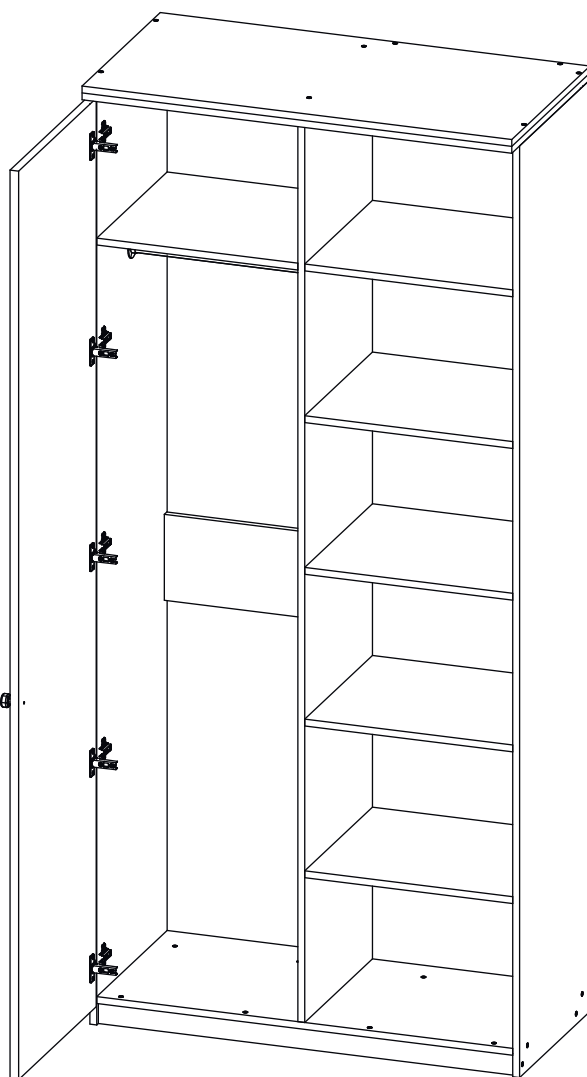

 Заклеить технические отверстия заглушками.

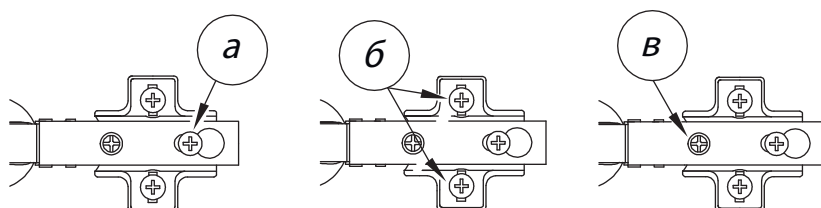

Регулировка петель

а - регулировка расстояния между дверью и корпусом
 б - регулировка положения двери по-вертикали
 в - регулировка положения двери по-горизонтали