 


Инструкция по сборке


София

Шкаф распашной - 26












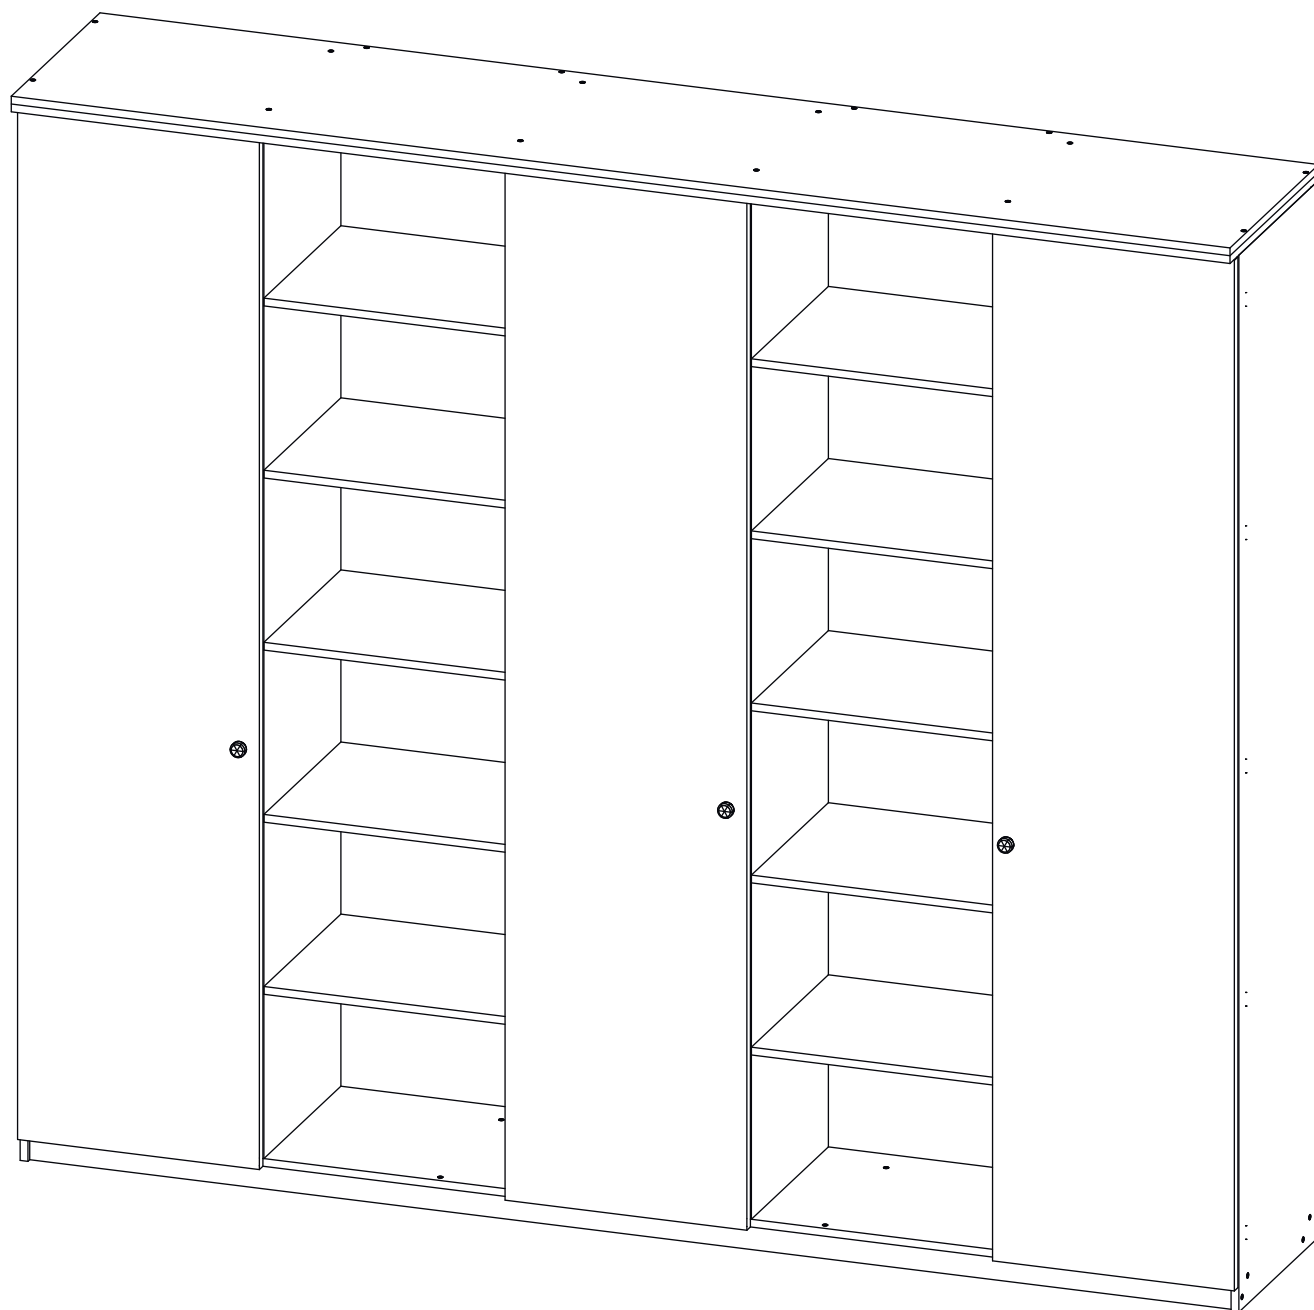


Детали




Поз.	Наименование	Кол-во	Длина	Ширина
1	Крыша	1	2500	500
2	Дно	1	2468	450
3	Щит ЛДСП	2	2102	500
4	Бок правый	1	2168	450
5	Бок левый	1	2168	450
6	Перегородка	4	2102	450
7	Полка	10	500	434
8	Полка	3	468	450
9	Цоколь	2	2468	50
10	р/ж	3	468	200
11	Дверь	3	2114	496
12	з/с	3	2148	496

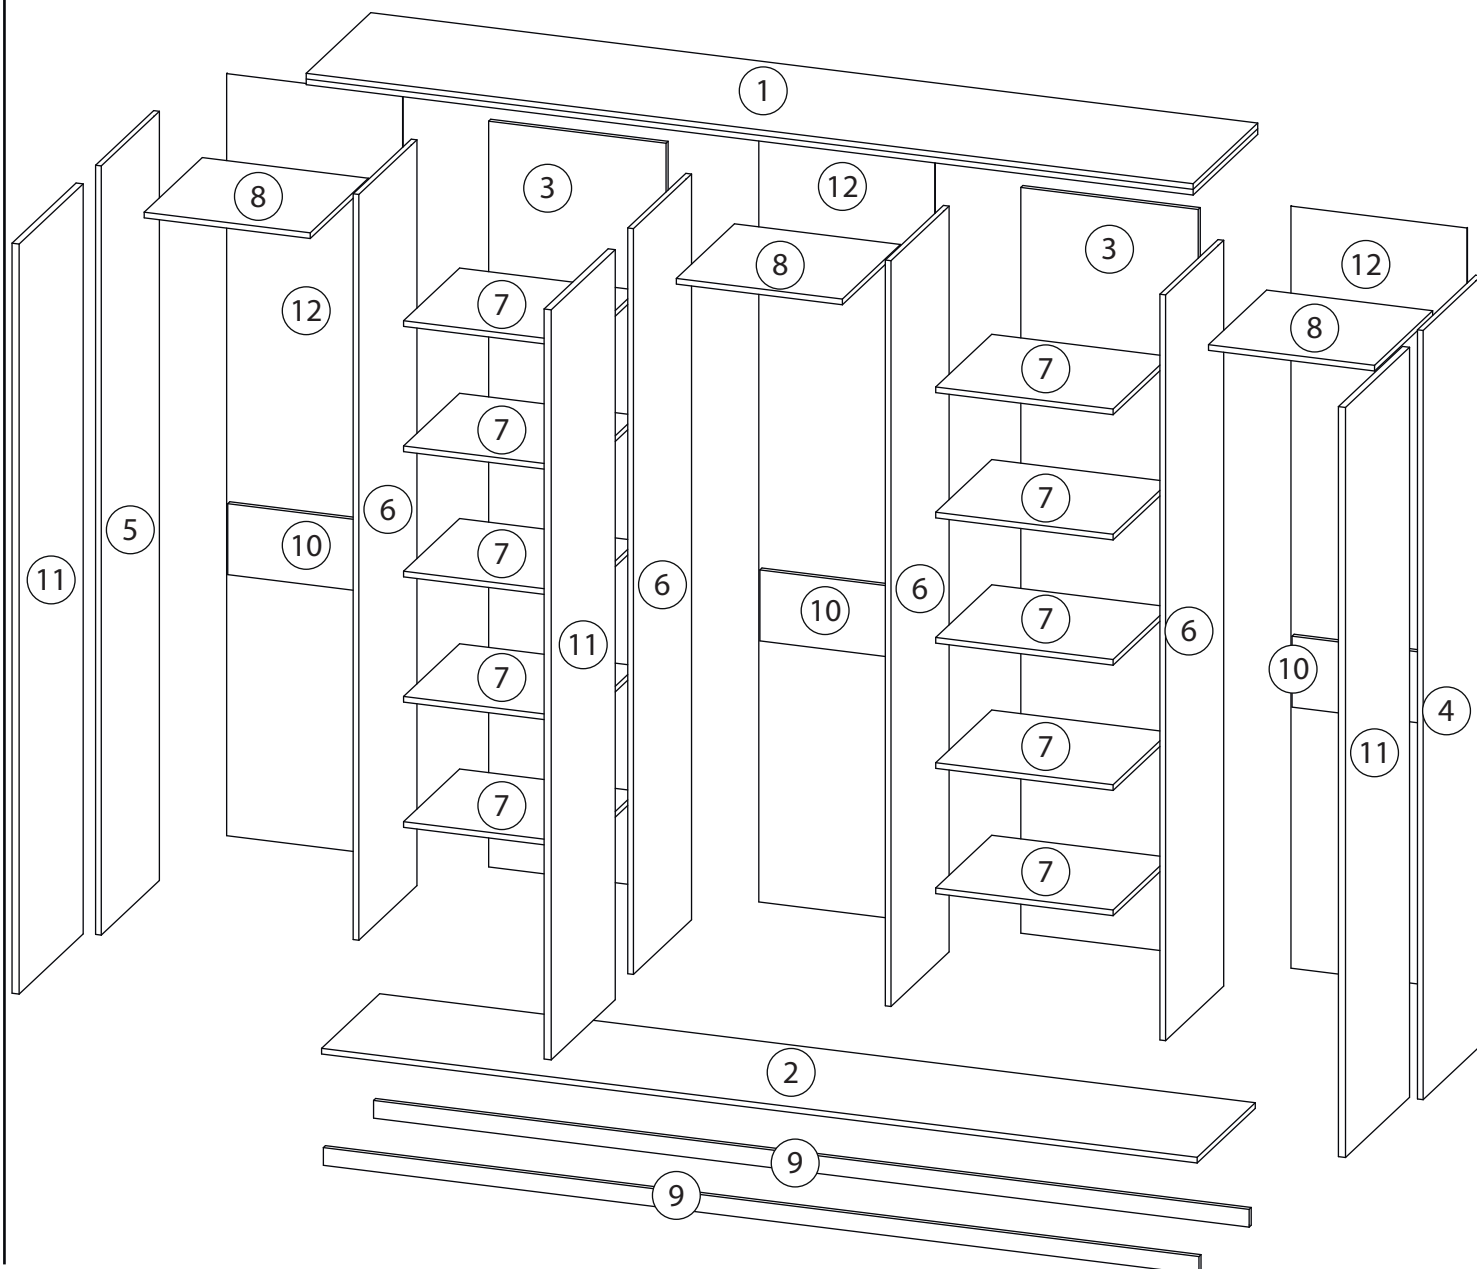 




Фурнитура

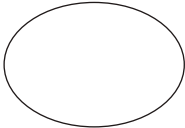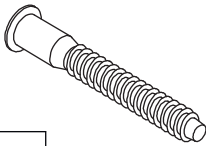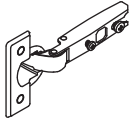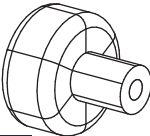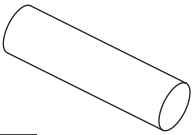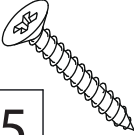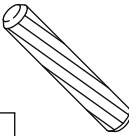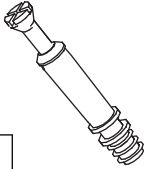            				
13	14	15	16	17
<u>Заглушка</u> <u>Ø13</u>	<u>Заглушка</u> <u>Ø17-20</u>	<u>Евровинт 6,3x13</u>	<u>Евровинт 7x50</u>	<u>Гвоздь 1,6x25</u>
				
18	19	20	21	22
<u>Саморез 3,5x16</u>	<u>Петля накладная</u>	<u>Стяжка VB35</u>	<u>Винт для стяжки</u> <u>VB35</u>	<u>Ручка кнопка</u>
				
23	24	25	26	27
<u>Штангодержатель</u>	<u>Штанга</u>	<u>Саморез 3,5x30</u>	<u>Шкант бук</u>	<u>Шток эксцентрика</u>
				
28				
<u>Эксцентрик</u>				

   
1

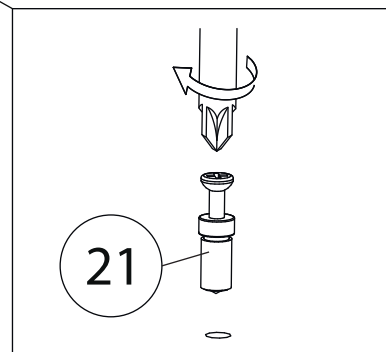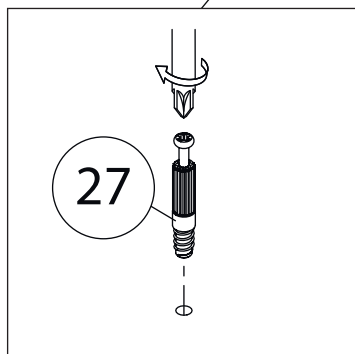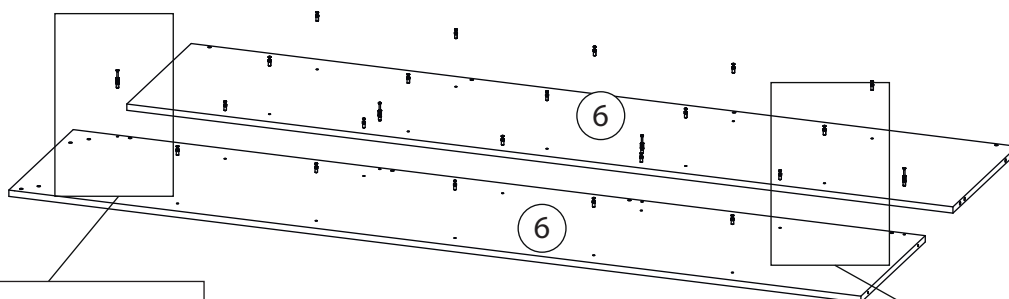


2

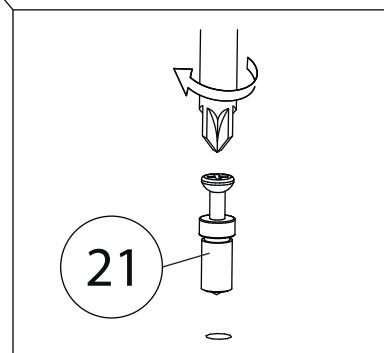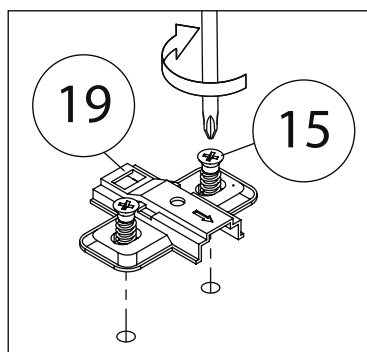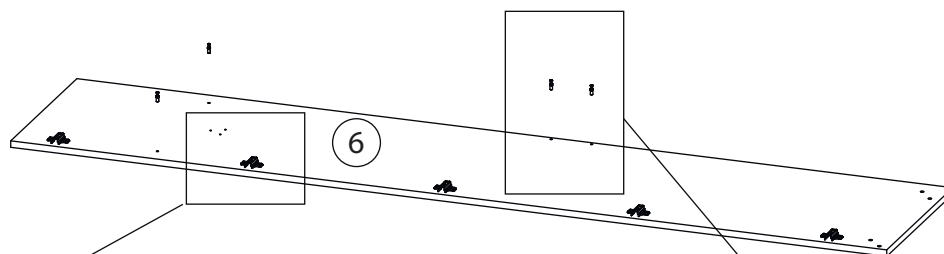   


3

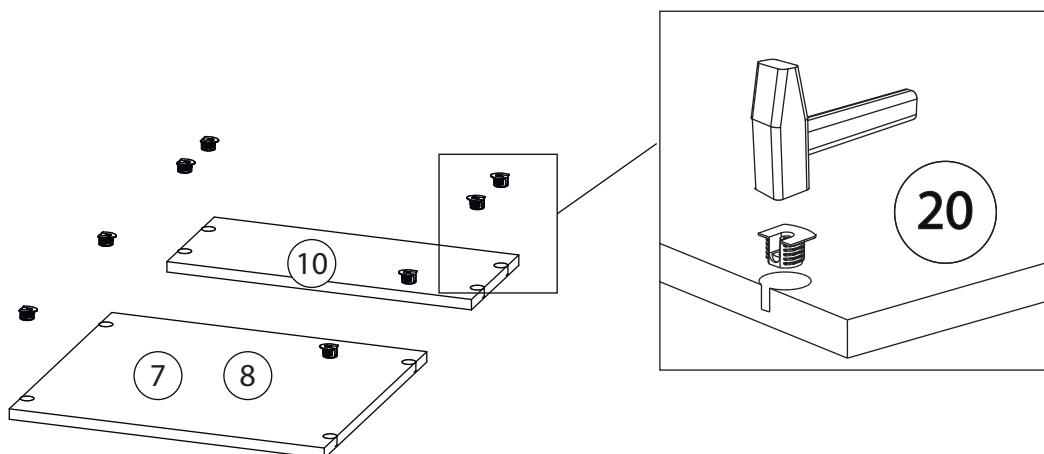 


4

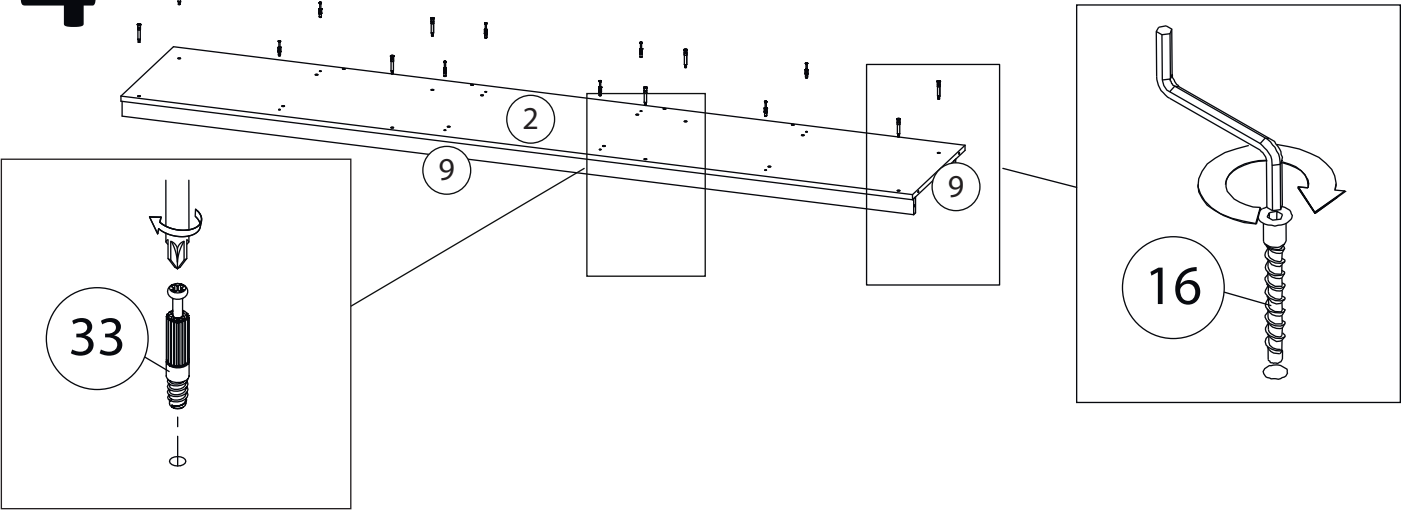 


5

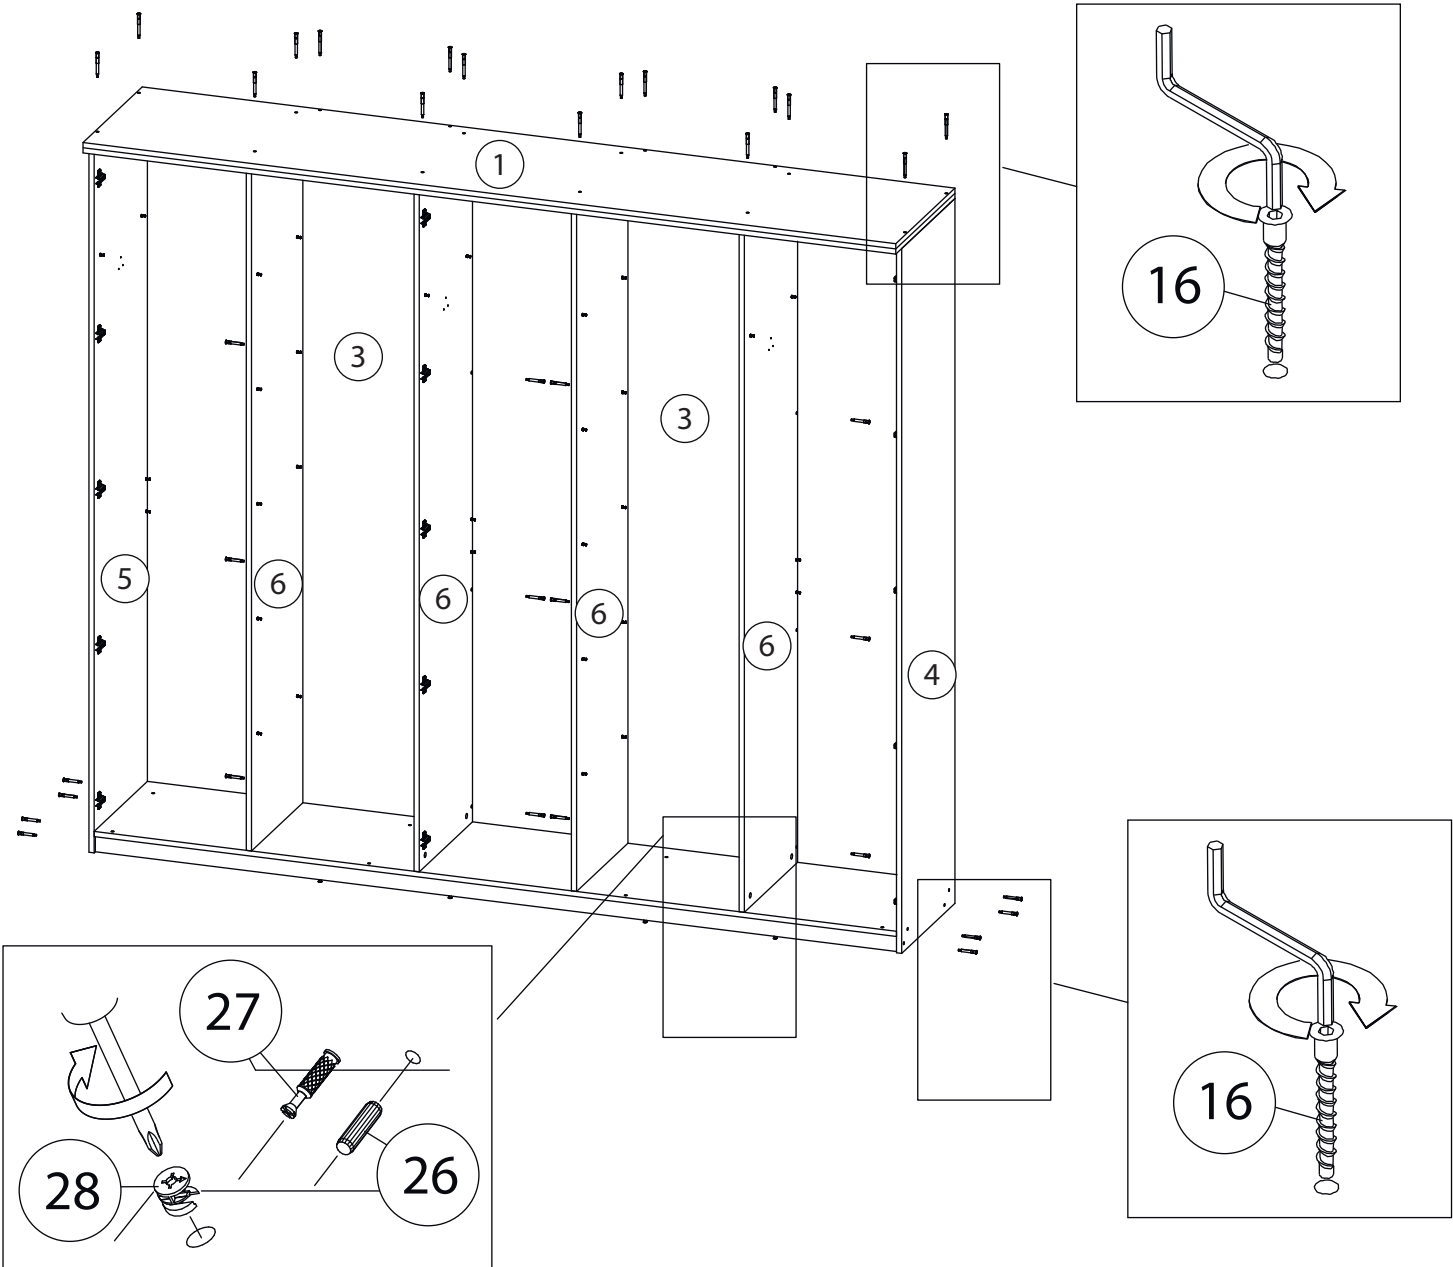 



6

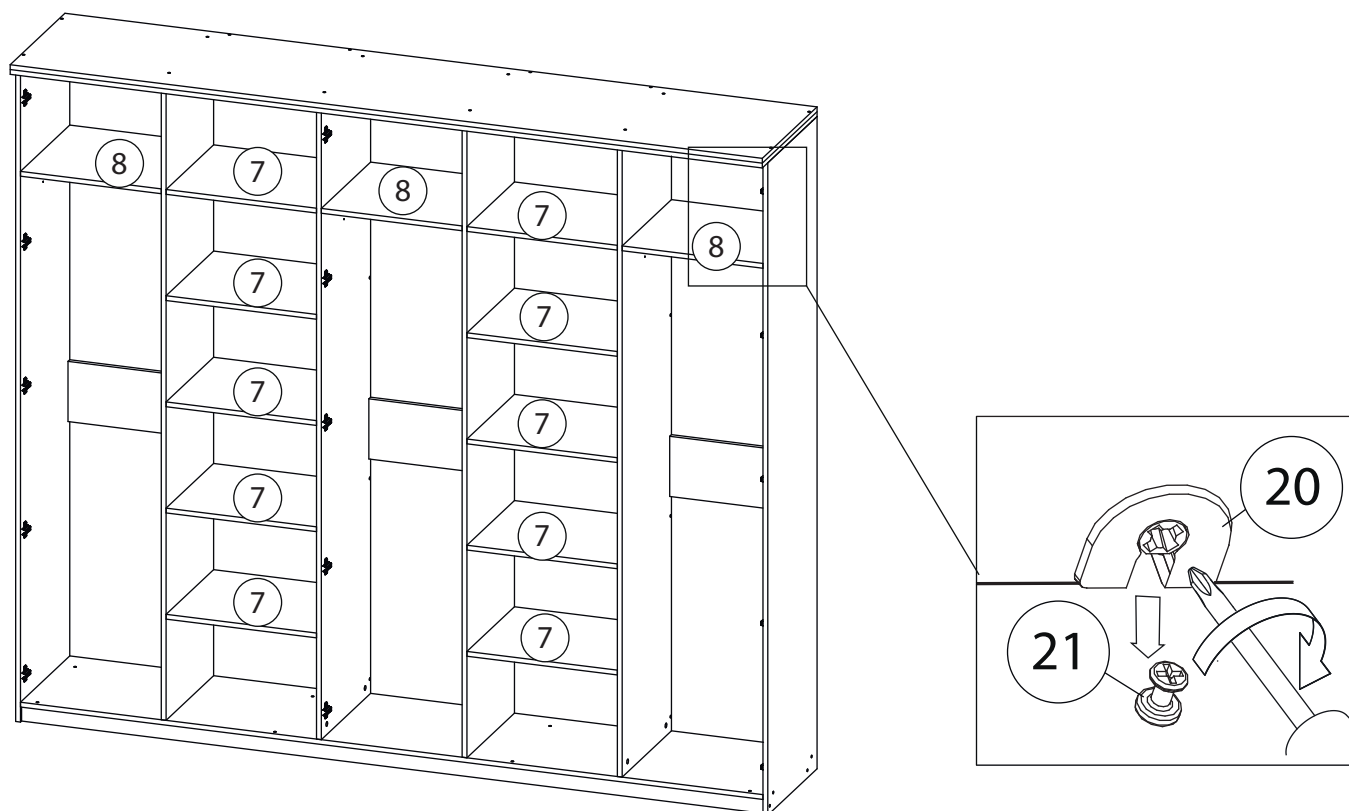 




7

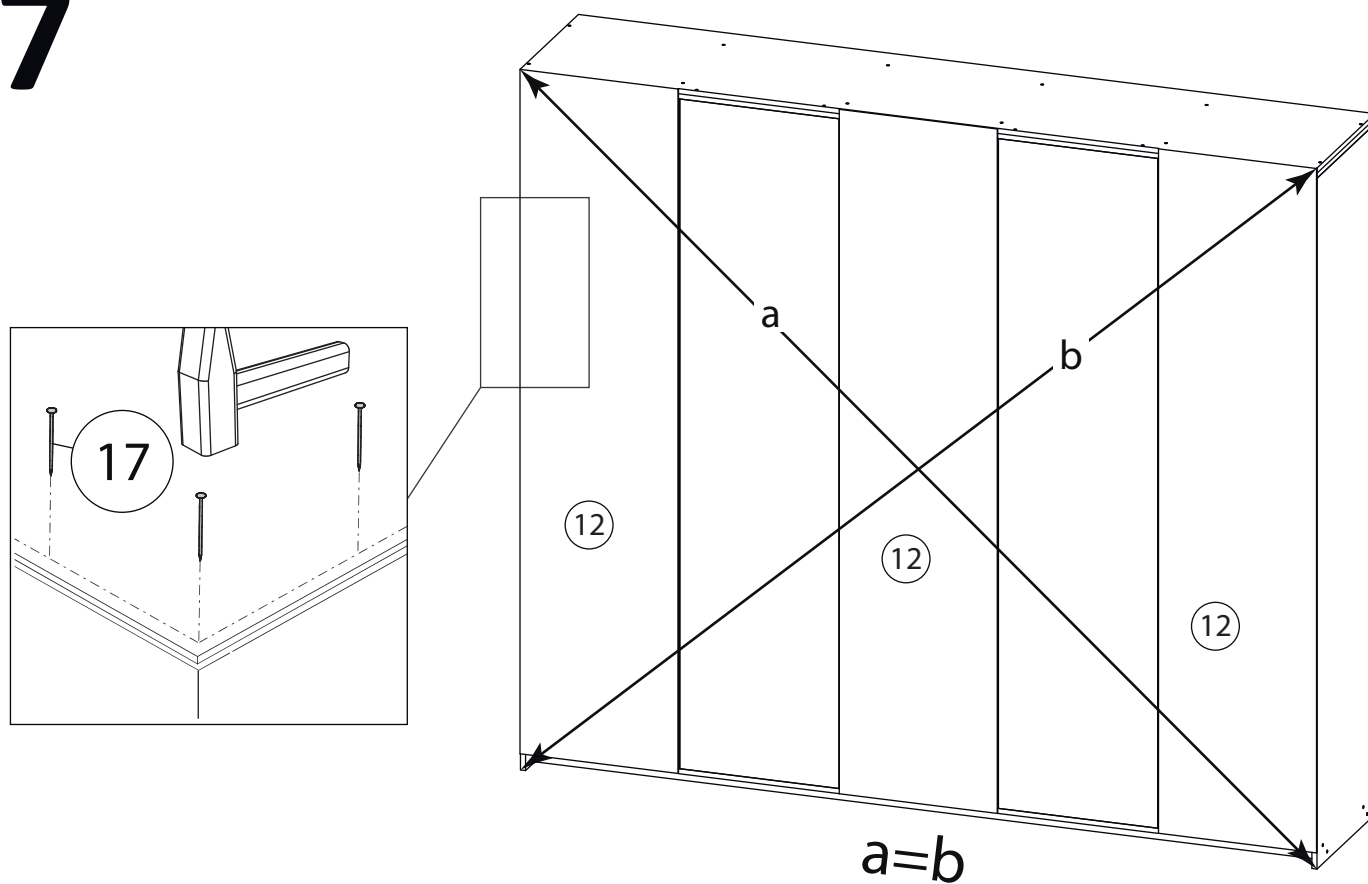 


8

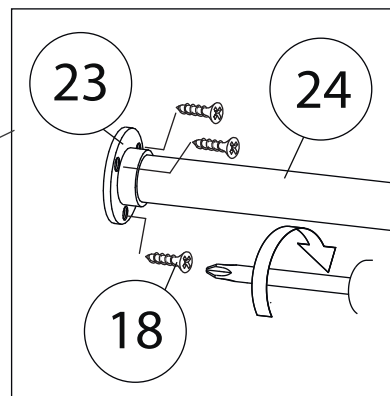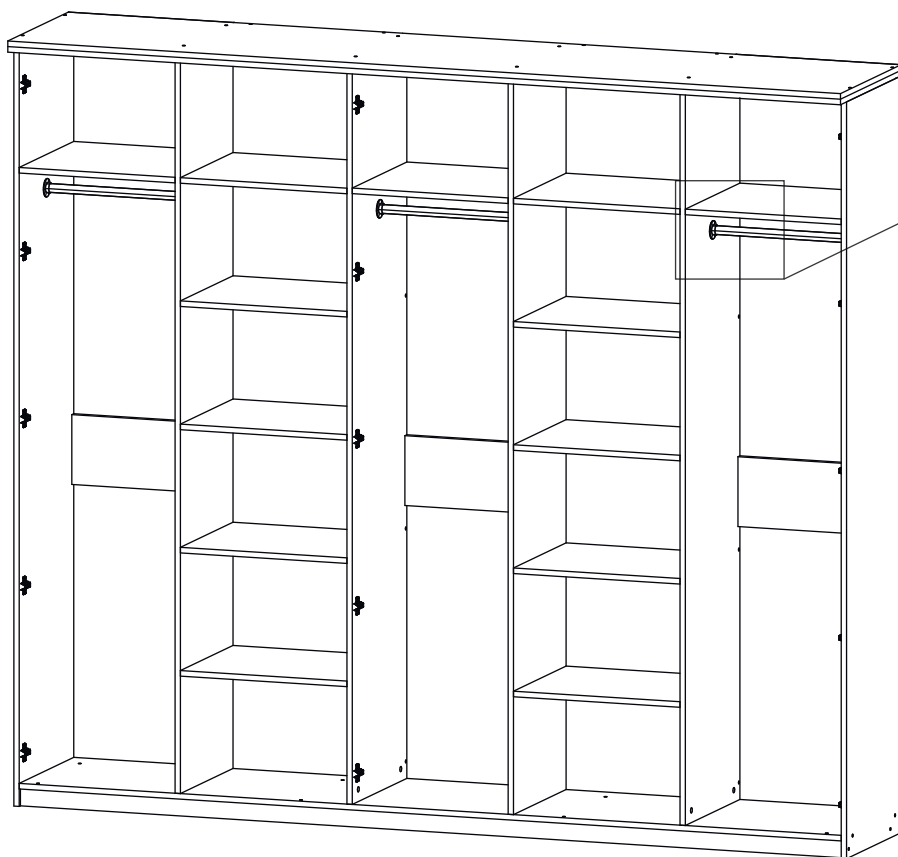  


9

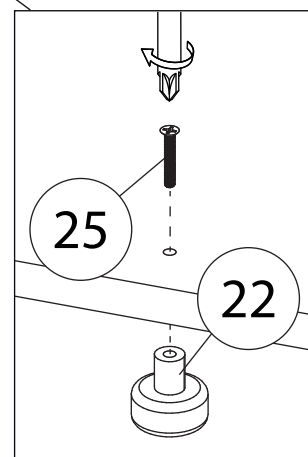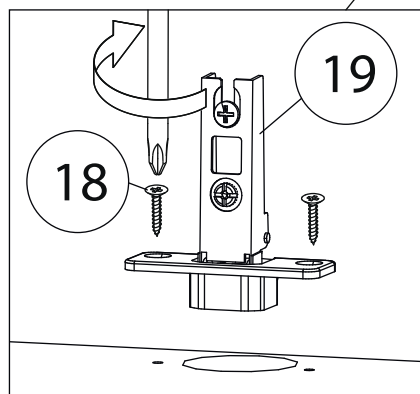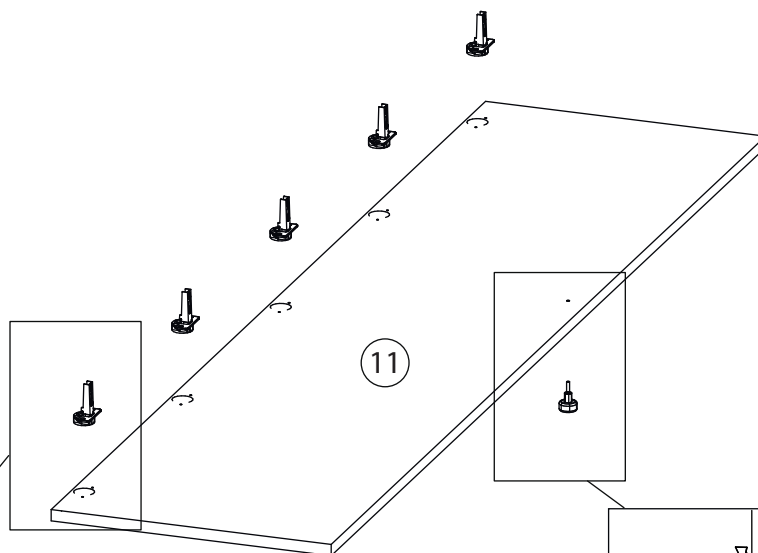   


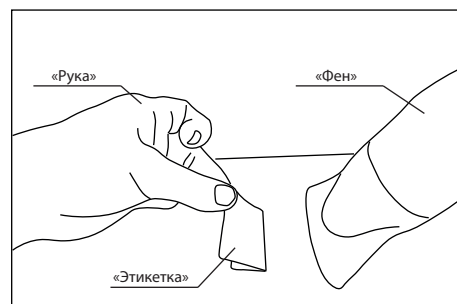 

 Удалить с детали этикетки со штрихкодом при помощи фена.

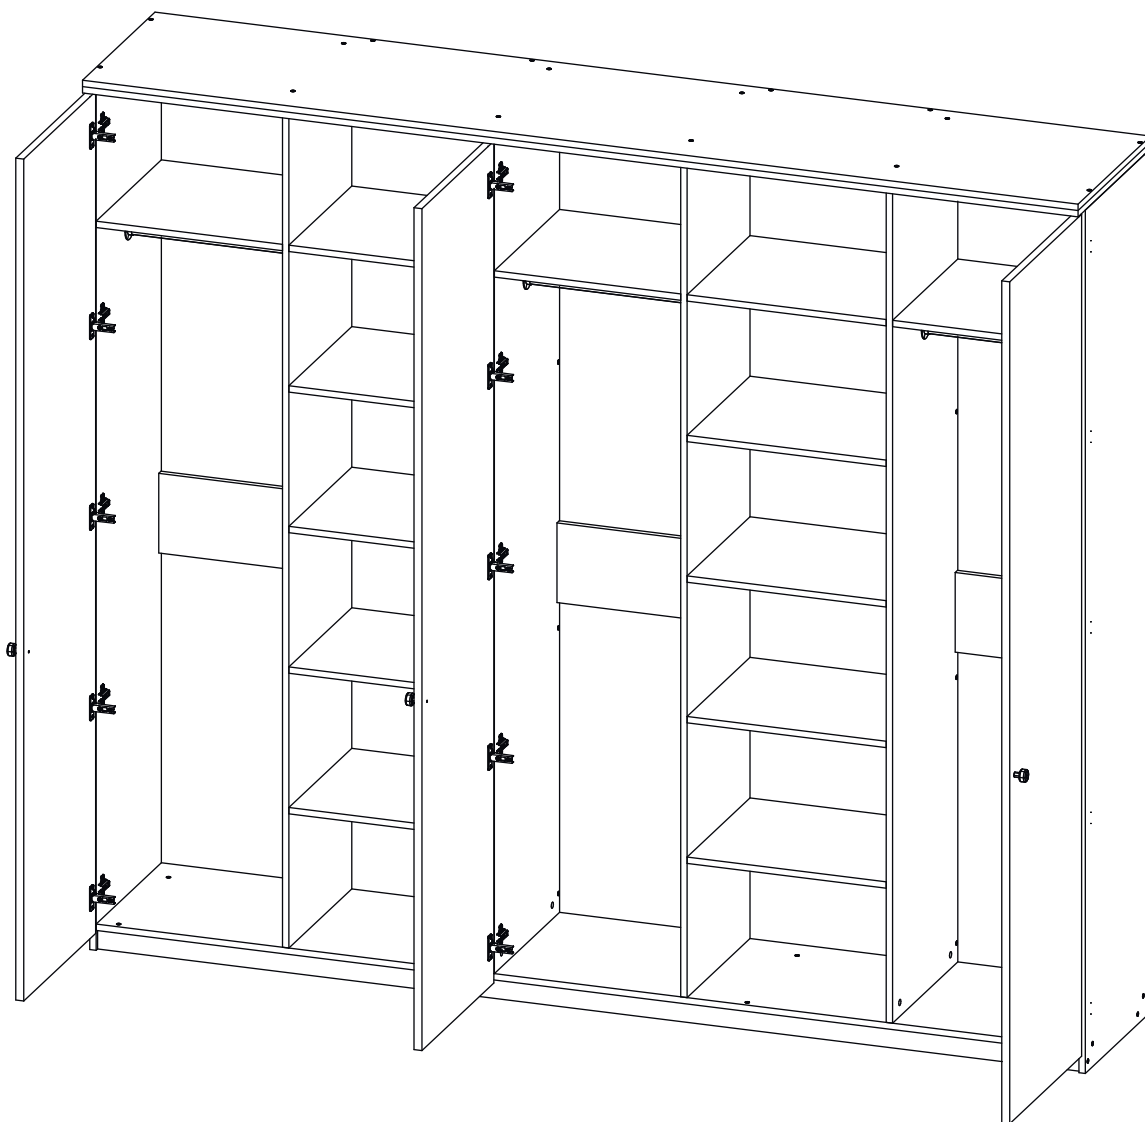

 Заклеить технические отверстия заглушками.

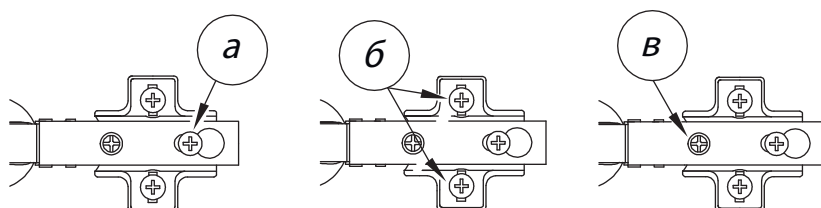

Регулировка петель

а - регулировка расстояния между дверью и корпусом
 б - регулировка положения двери по-вертикали
 в - регулировка положения двери по-горизонтали