 


Инструкция по сборке


София

Шкаф распашной - 39












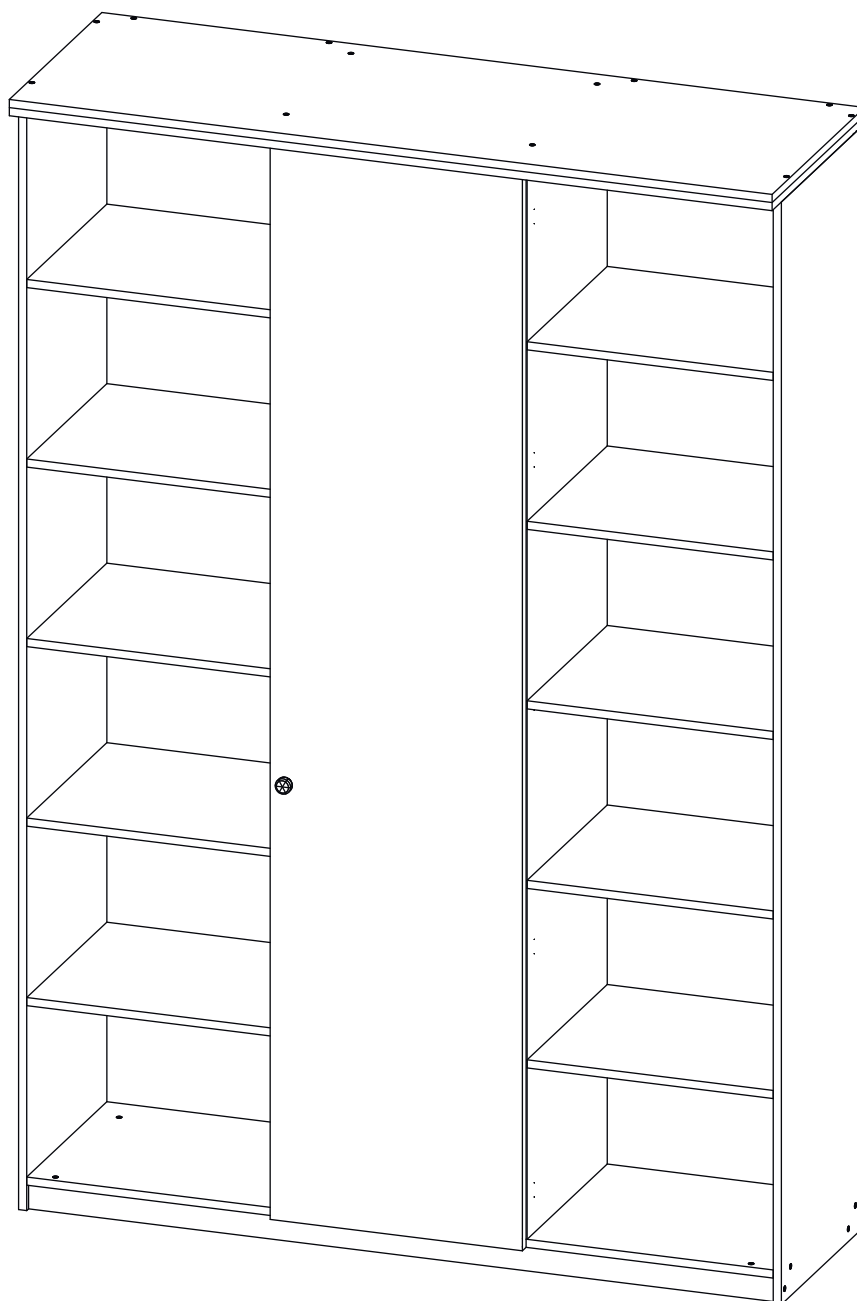


Детали




Поз.	Наименование	Кол-во	Длина	Ширина
1	Крыша	1	1500	500
2	Щит ЛДСП	1	2102	484
3	Щит ЛДСП	1	2102	484
4	Бок левый	1	2168	450
5	Бок правый	1	2168	450
6	Перегородка	1	2102	450
7	Перегородка	1	2102	450
8	Дно	1	1468	450
9	Полка	1	468	450
10	Полка	10	484	433
11	р/ж	1	468	200
12	Цоколь	2	1468	50
13	Дверь	1	2114	496
14	з/с	1	2148	496

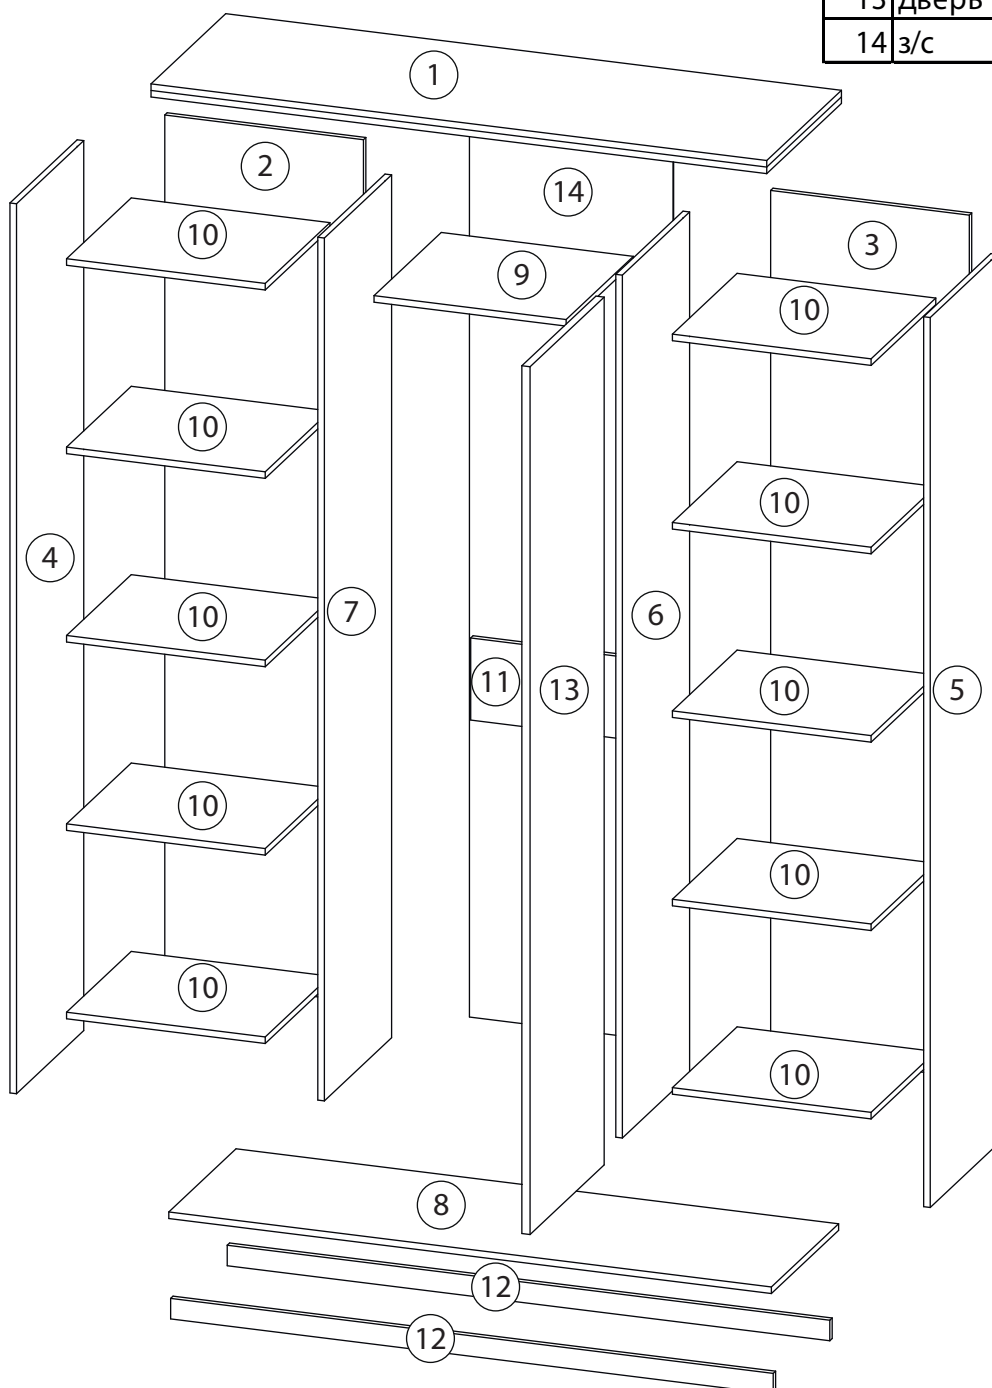 




Фурнитура

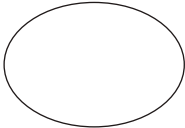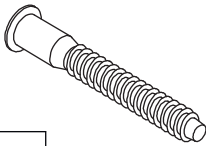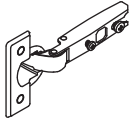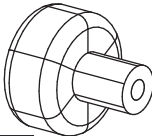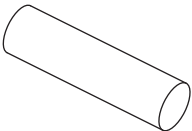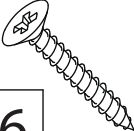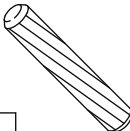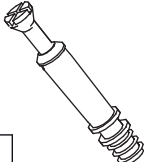            				
14	15	16	17	18
<u>Заглушка</u> <u>Ø13</u>	<u>Заглушка</u> <u>Ø17-20</u>	<u>Евровинт 6,3x13</u>	<u>Евровинт 7x50</u>	<u>Гвоздь 1,6x25</u>
				
19	20	21	22	23
<u>Саморез 3,5x16</u>	<u>Петля накладная</u>	<u>Стяжка VB35</u>	<u>Винт для стяжки</u> <u>VB35</u>	<u>Ручка кнопка</u>
				
24	25	26	27	28
<u>Штангодержатель</u>	<u>Штанга</u>	<u>Саморез 3,5x30</u>	<u>Шкант бук</u>	<u>Шток эксцентрика</u>
				
29				
<u>Эксцентрик</u>				

  
 
1

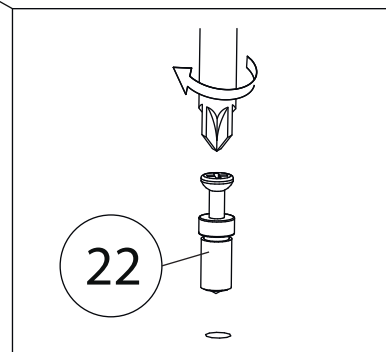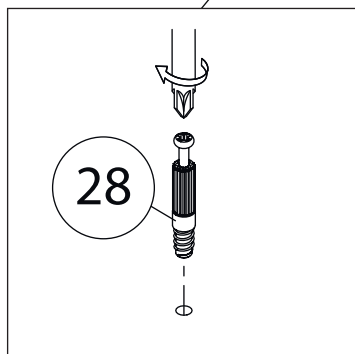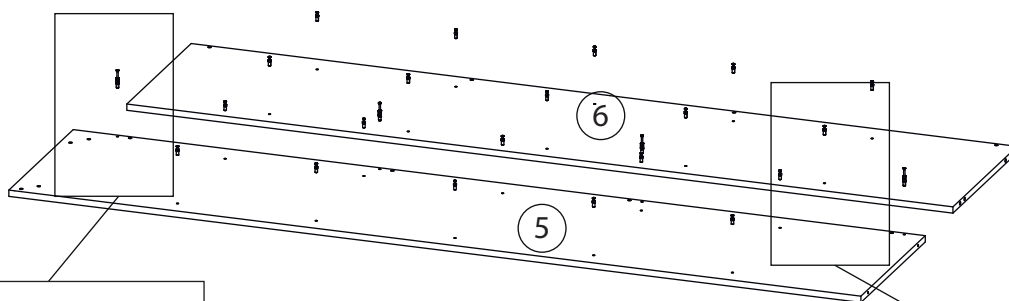


2

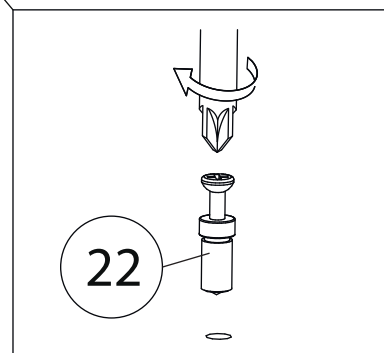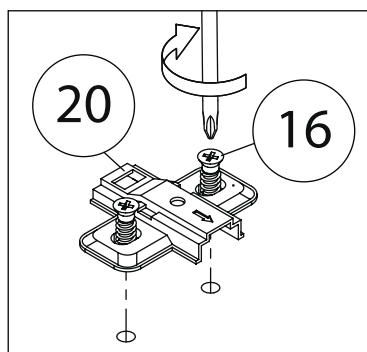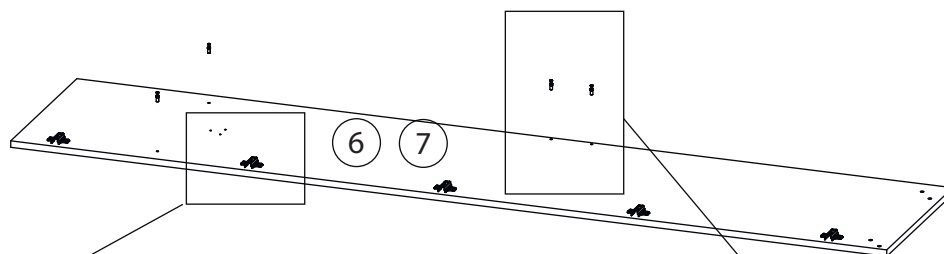   


3

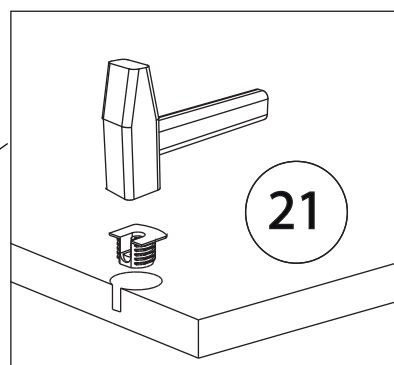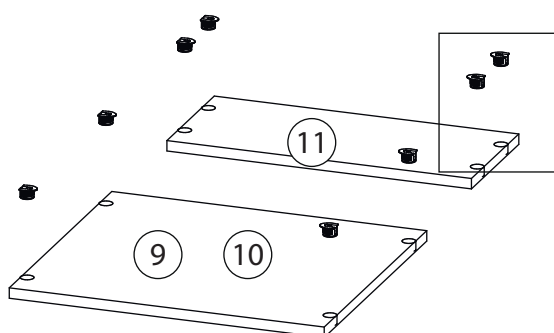  



4

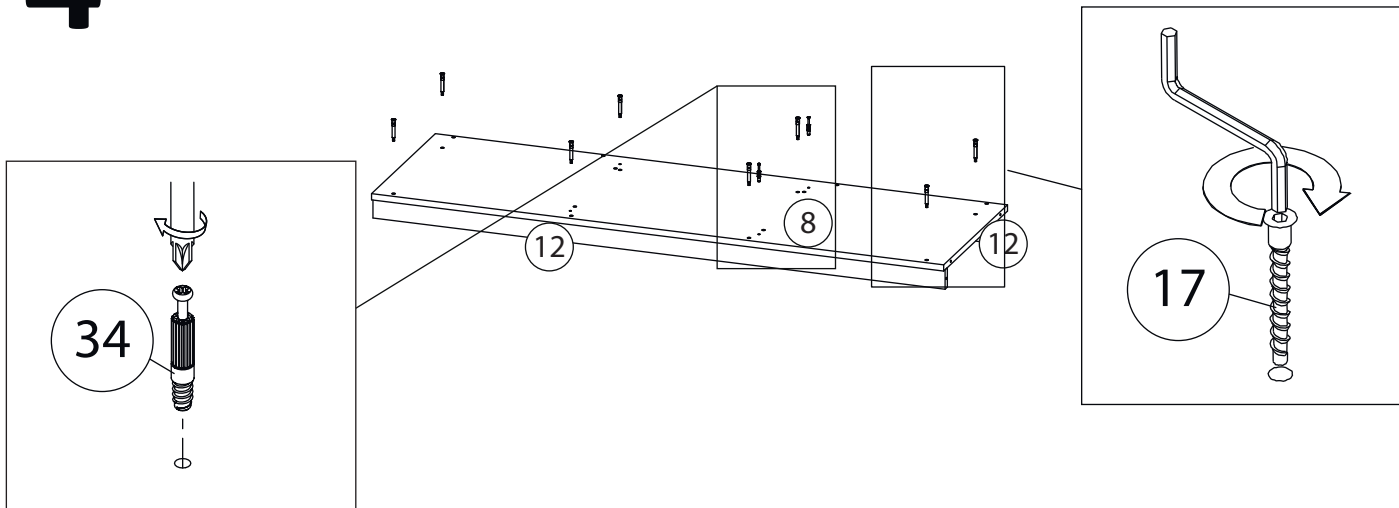 



5

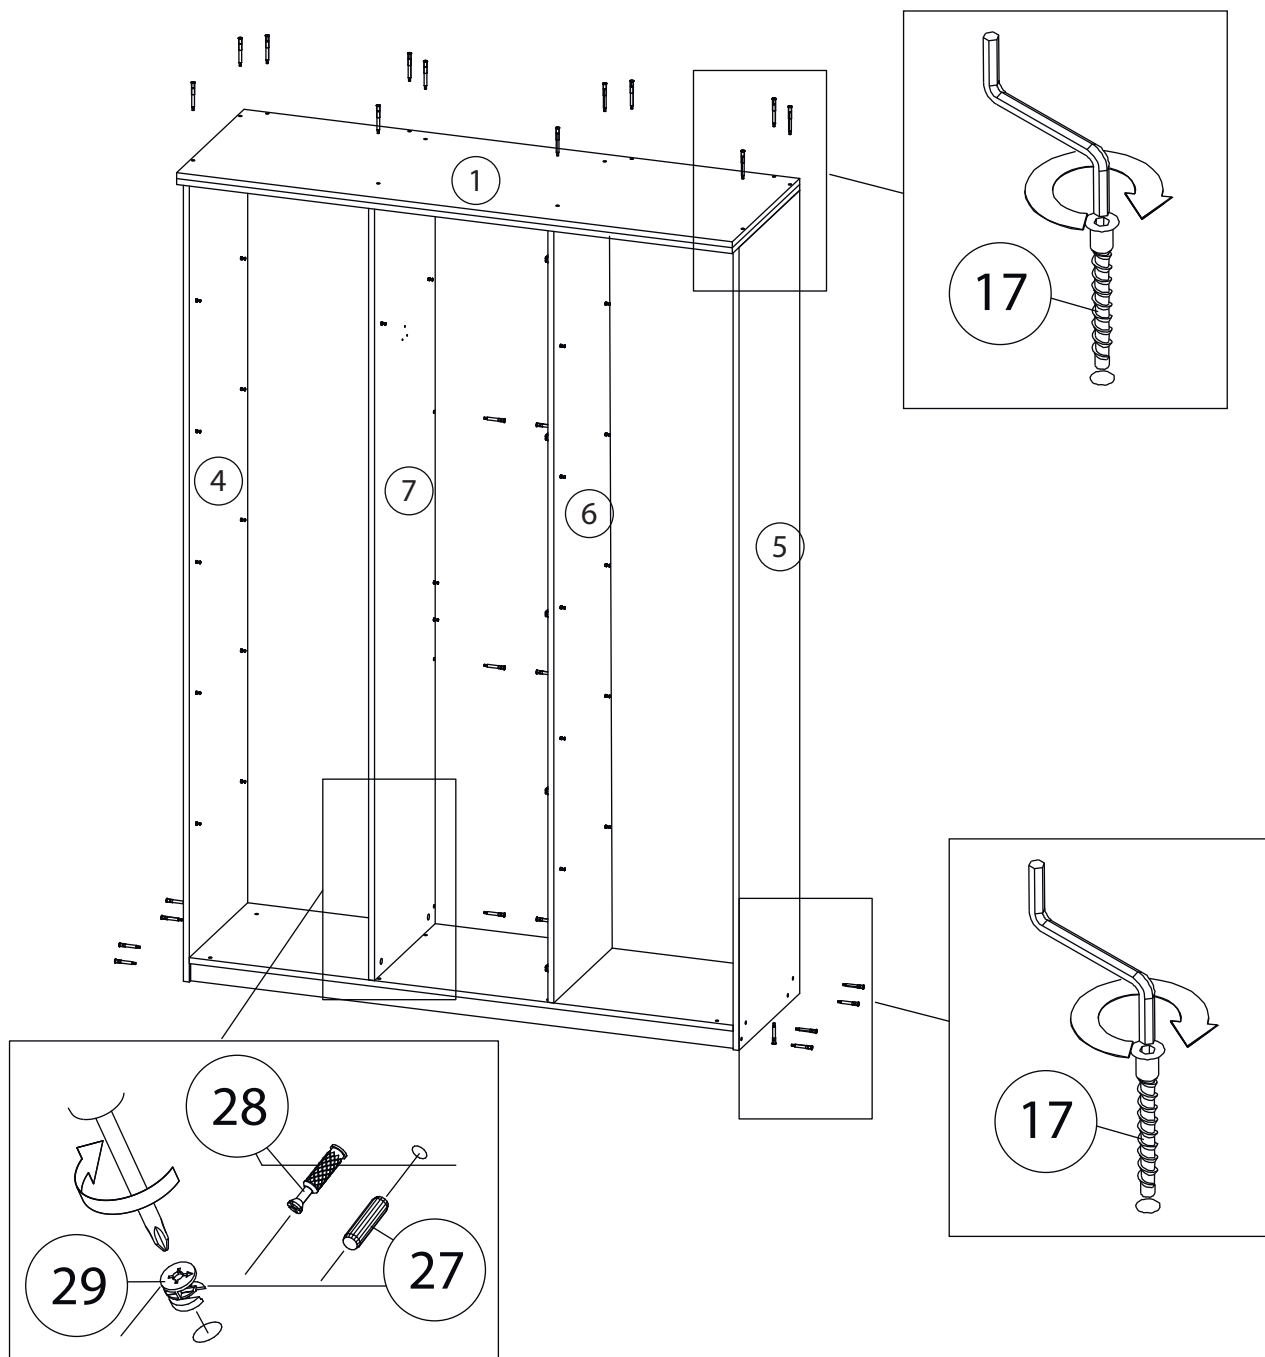 



6

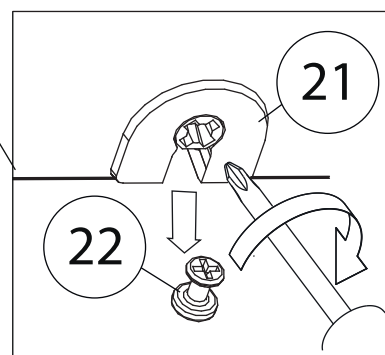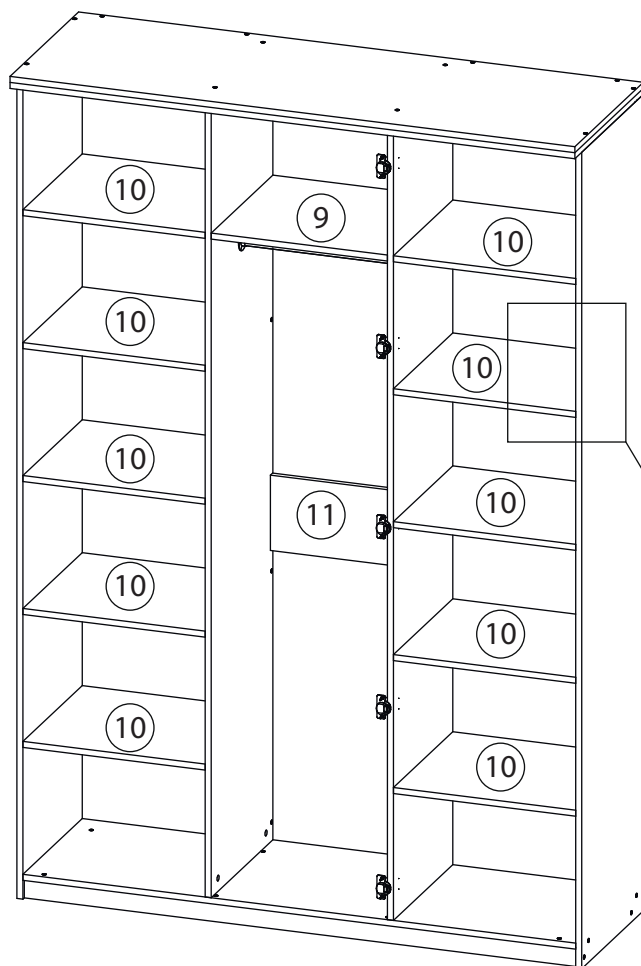  




7

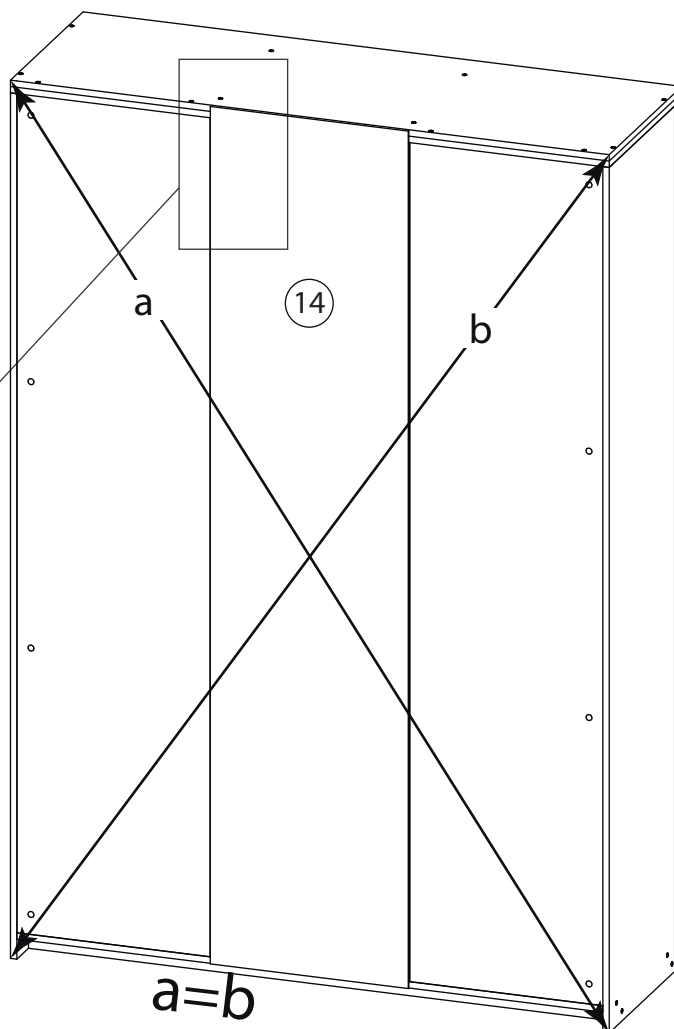 
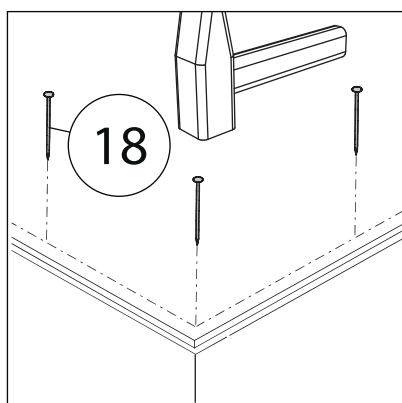 


8

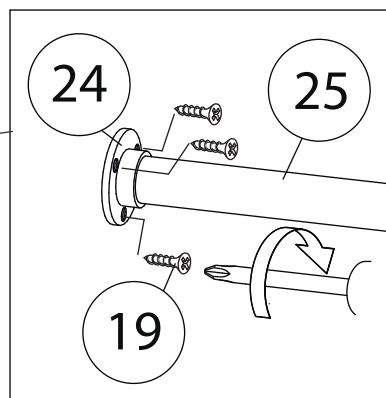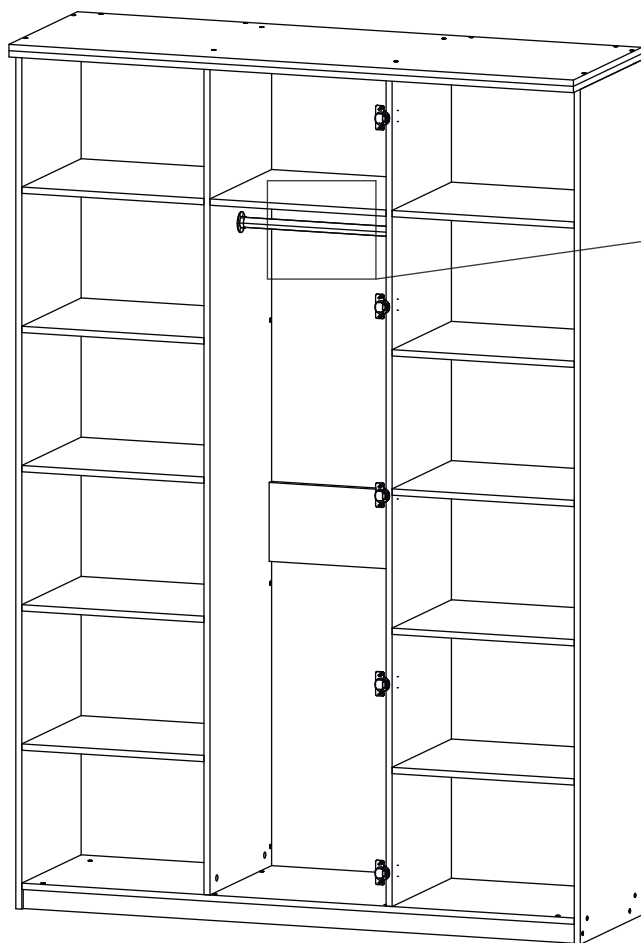  


9

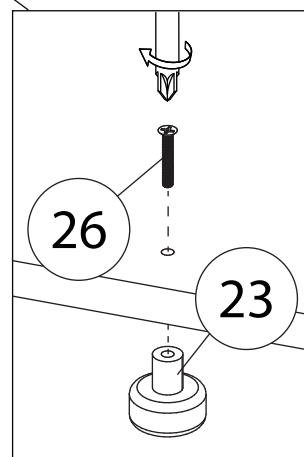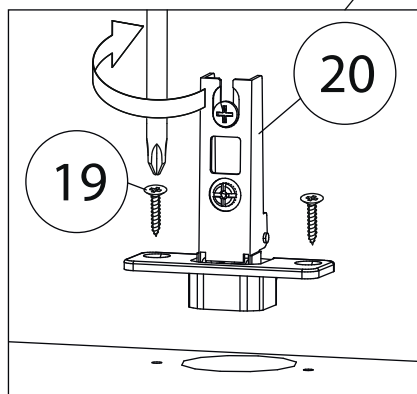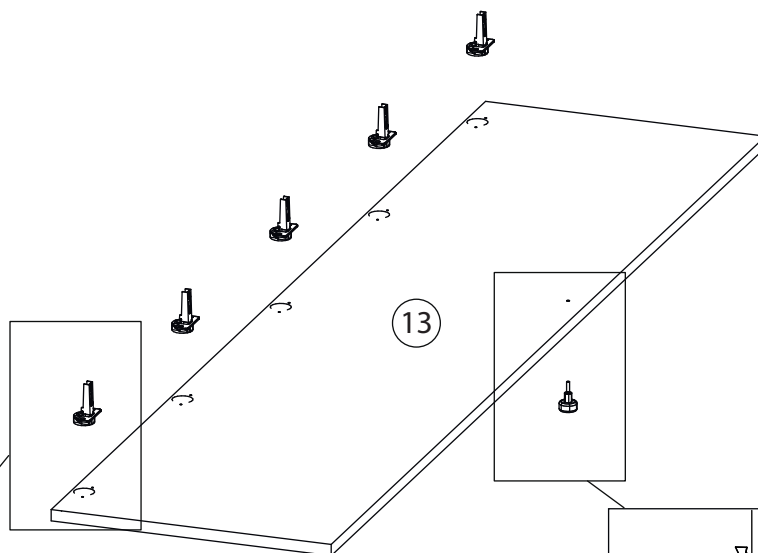   


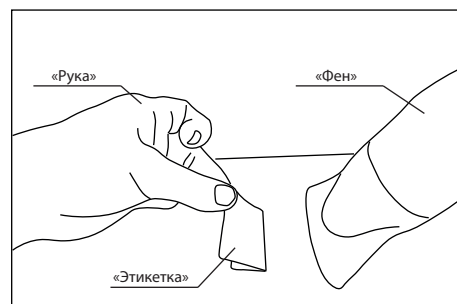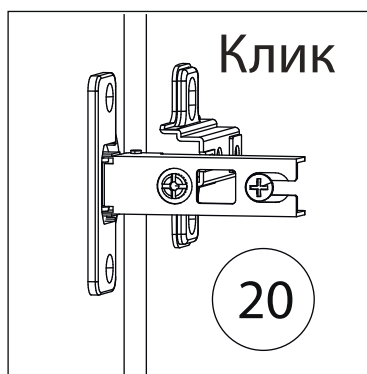  

 Удалить с детали этикетки со штрихкодом при помощи фена.

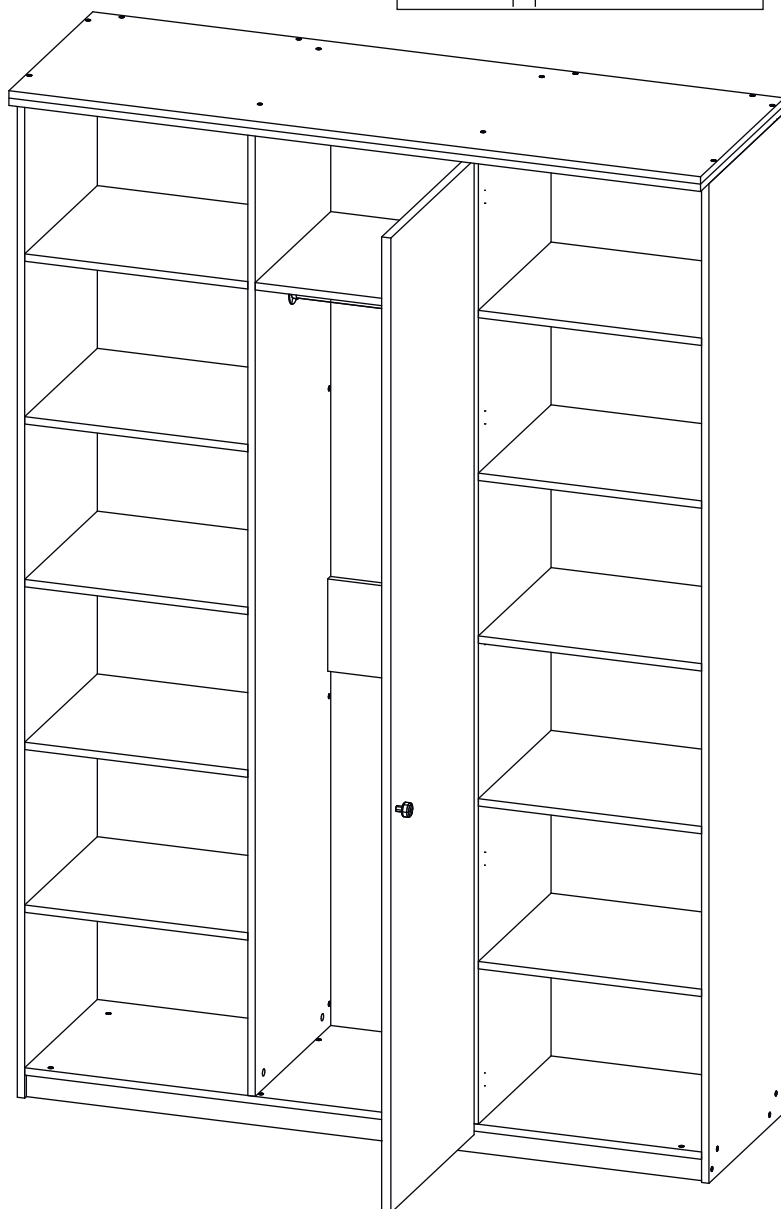

 Заклеить технические отверстия заглушками.

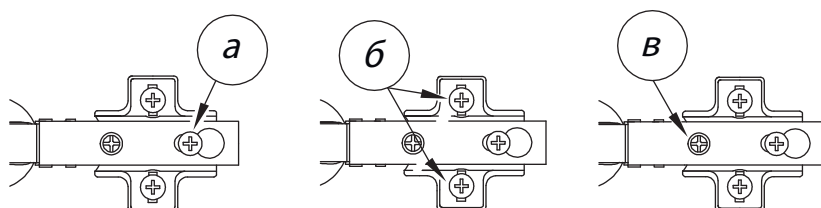

Регулировка петель

а - регулировка расстояния между дверью и корпусом
 б - регулировка положения двери по-вертикали
 в - регулировка положения двери по-горизонтали