


Инструкция по сборке


Модерн

Стенка









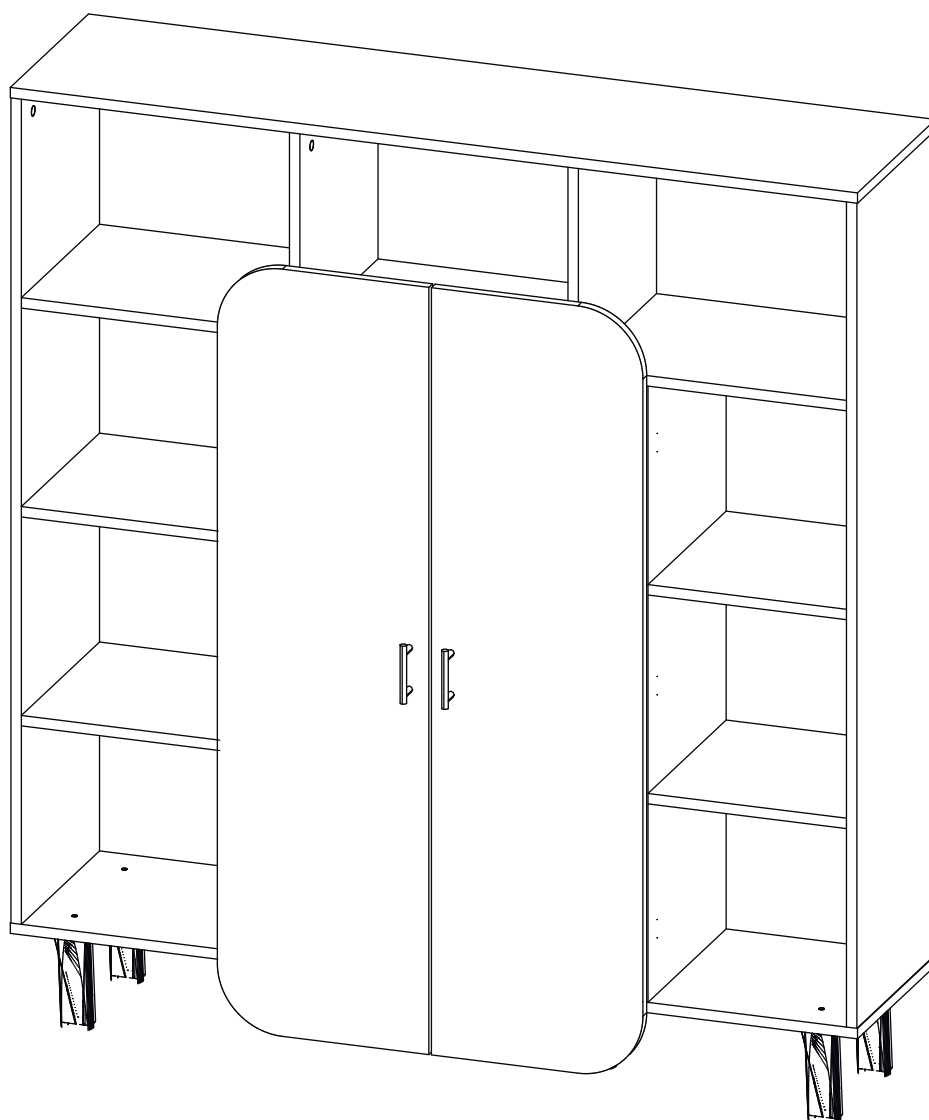


Детали


Поз.	Наименование	Кол-во	Длина	Ширина
1	Крыша	1	1302	330
2	Дно	1	1302	330
3	Полка	1	1268	330
4	Бок правый	1	1268	330
5	Бок левый	1	1268	330
6	Перегородка	1	947	330
7	Перегородка	1	947	330
8	Перегородка	1	947	330
9	Полка	8	305	330
10	Перегородка	2	305	330
11	Дверь1	1	1179	325
12	Дверь2	1	1179	325
13	з/с	1	325	1296
14	з/с	2	967	325
15	з/с	2	967	317

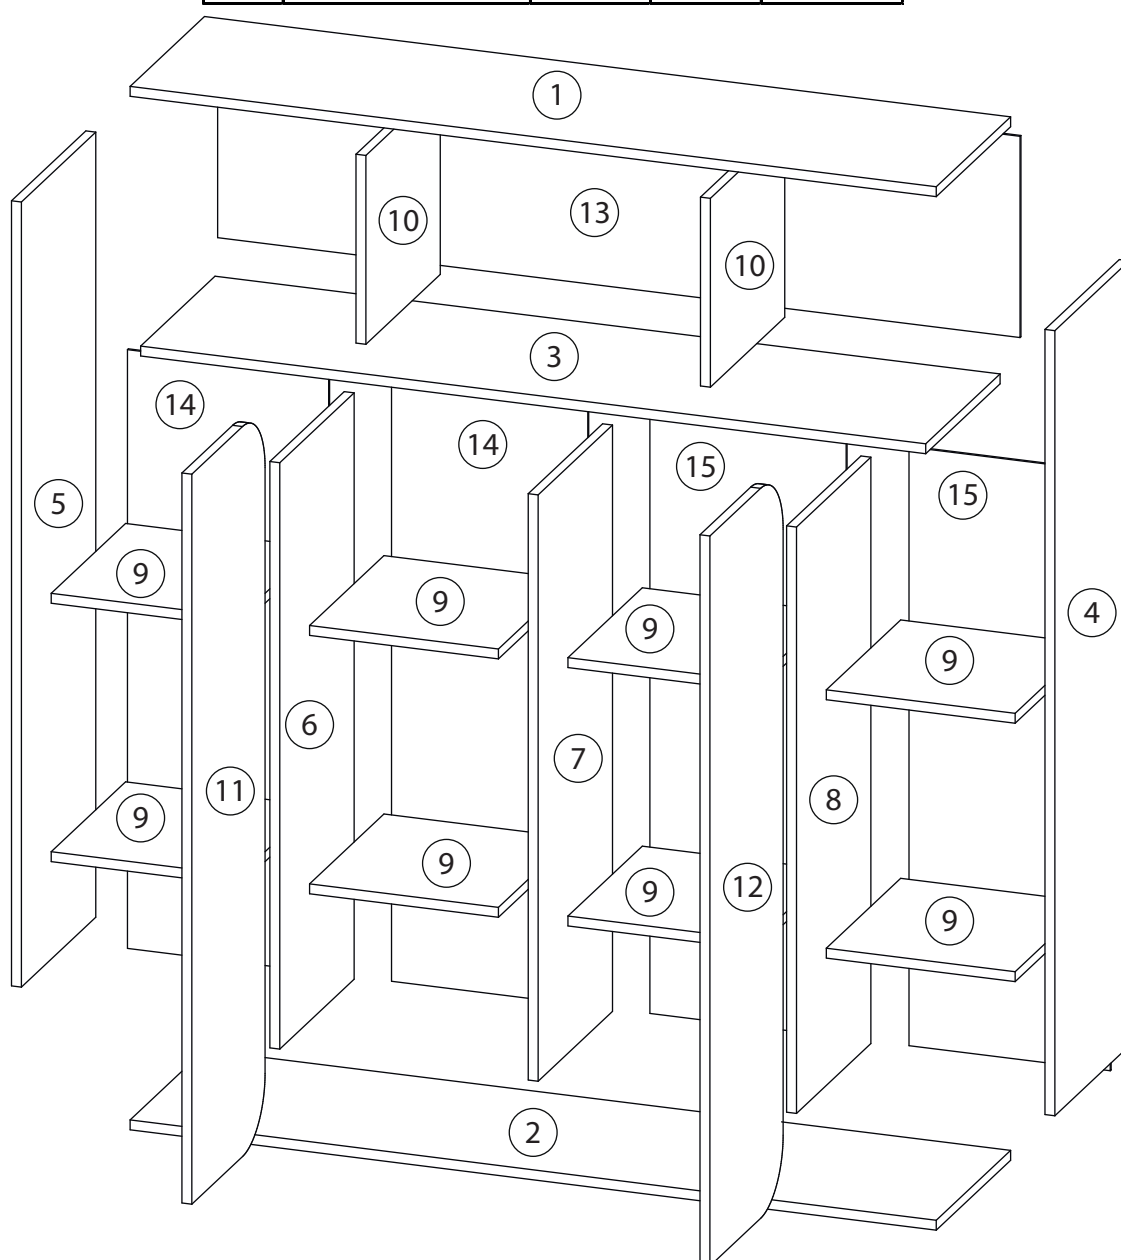


Фурнитура

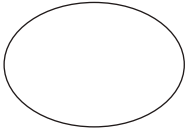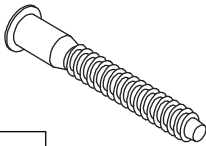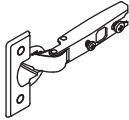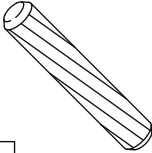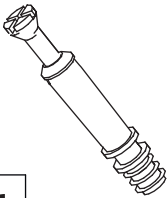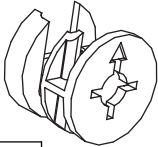				
16	17	18	19	20
<u>Заглушка</u> <u>Ø13</u>	<u>Заглушка</u> <u>Ø17-20</u>	<u>Евровинт 6,3x13</u>	<u>Евровинт 7x50</u>	<u>Стяжка VB35</u>
				
21	22	23	24	25
<u>Саморез 3,5x16</u>	<u>Петля накладная</u>	<u>Гвоздь 1,6x25</u>	<u>Винт для стяжки</u> <u>VB35</u>	<u>Шкант бук</u>
				
26	27			
<u>Шток эксцентрика</u>	<u>Эксцентрик</u>			


1

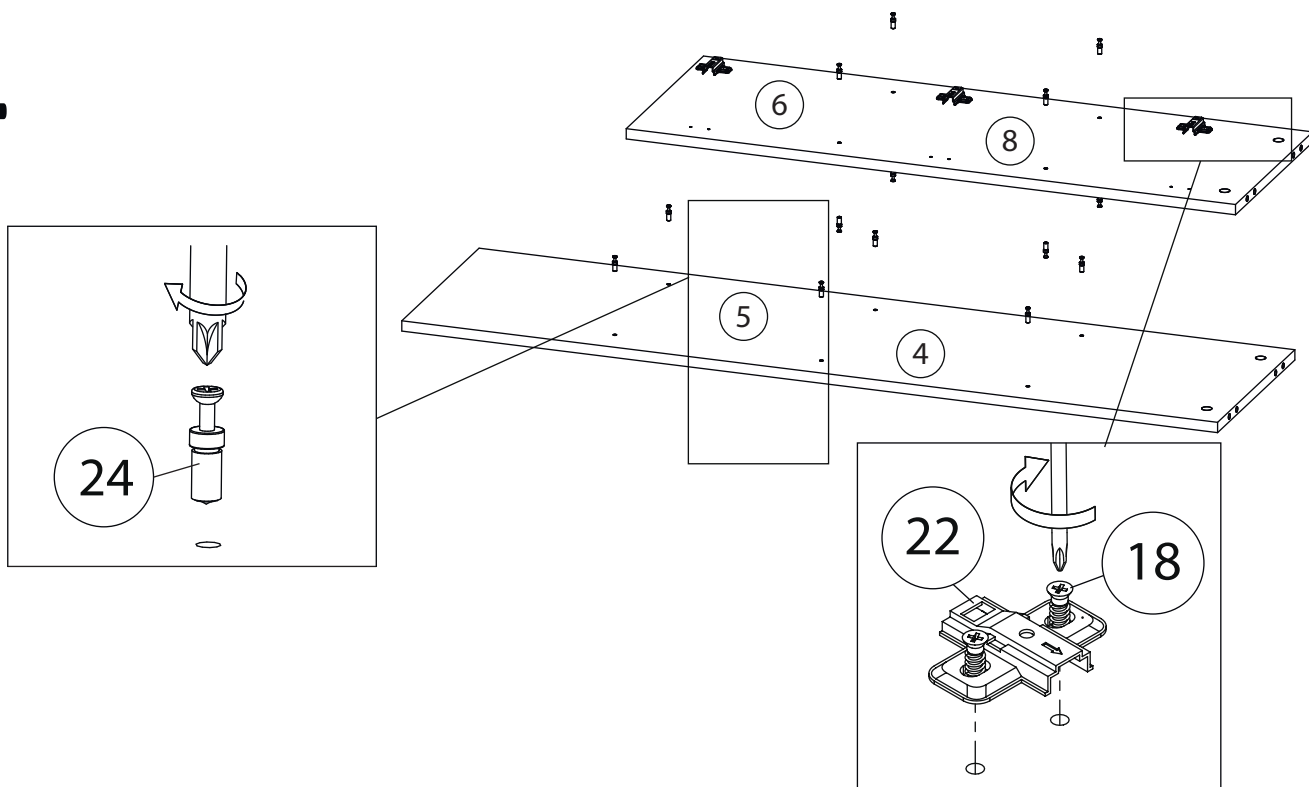


2

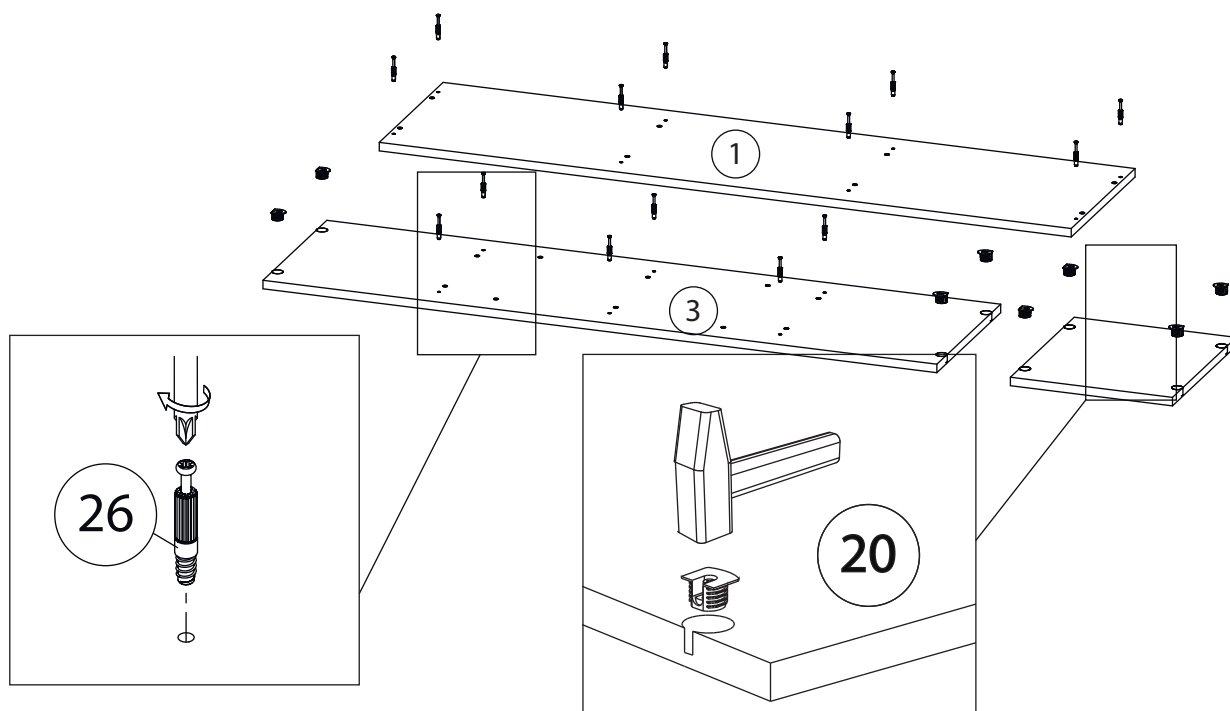


3

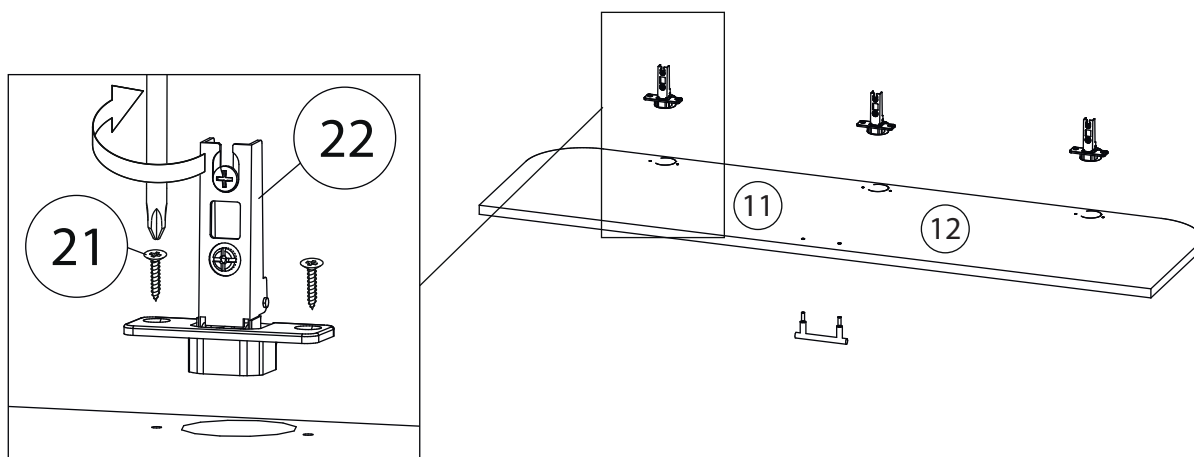



4

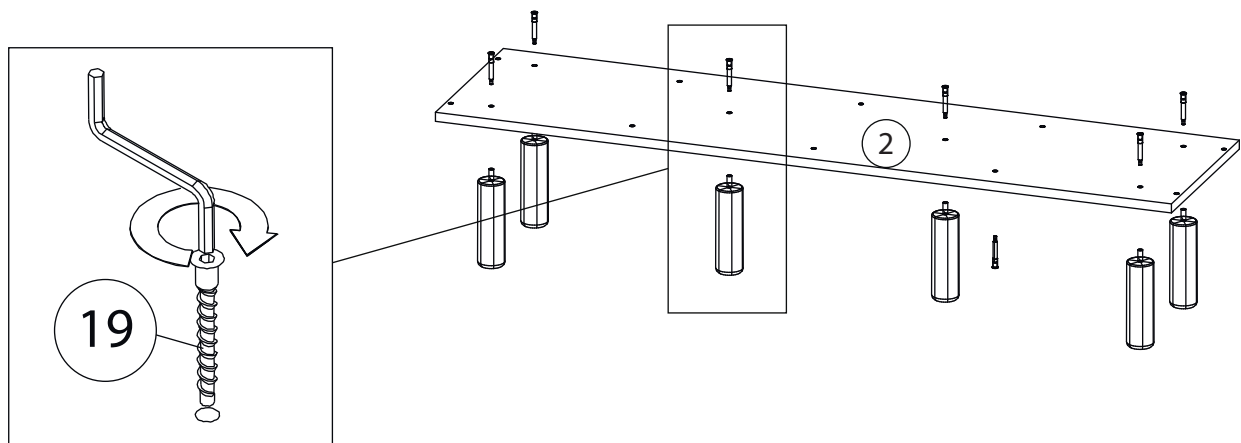



5

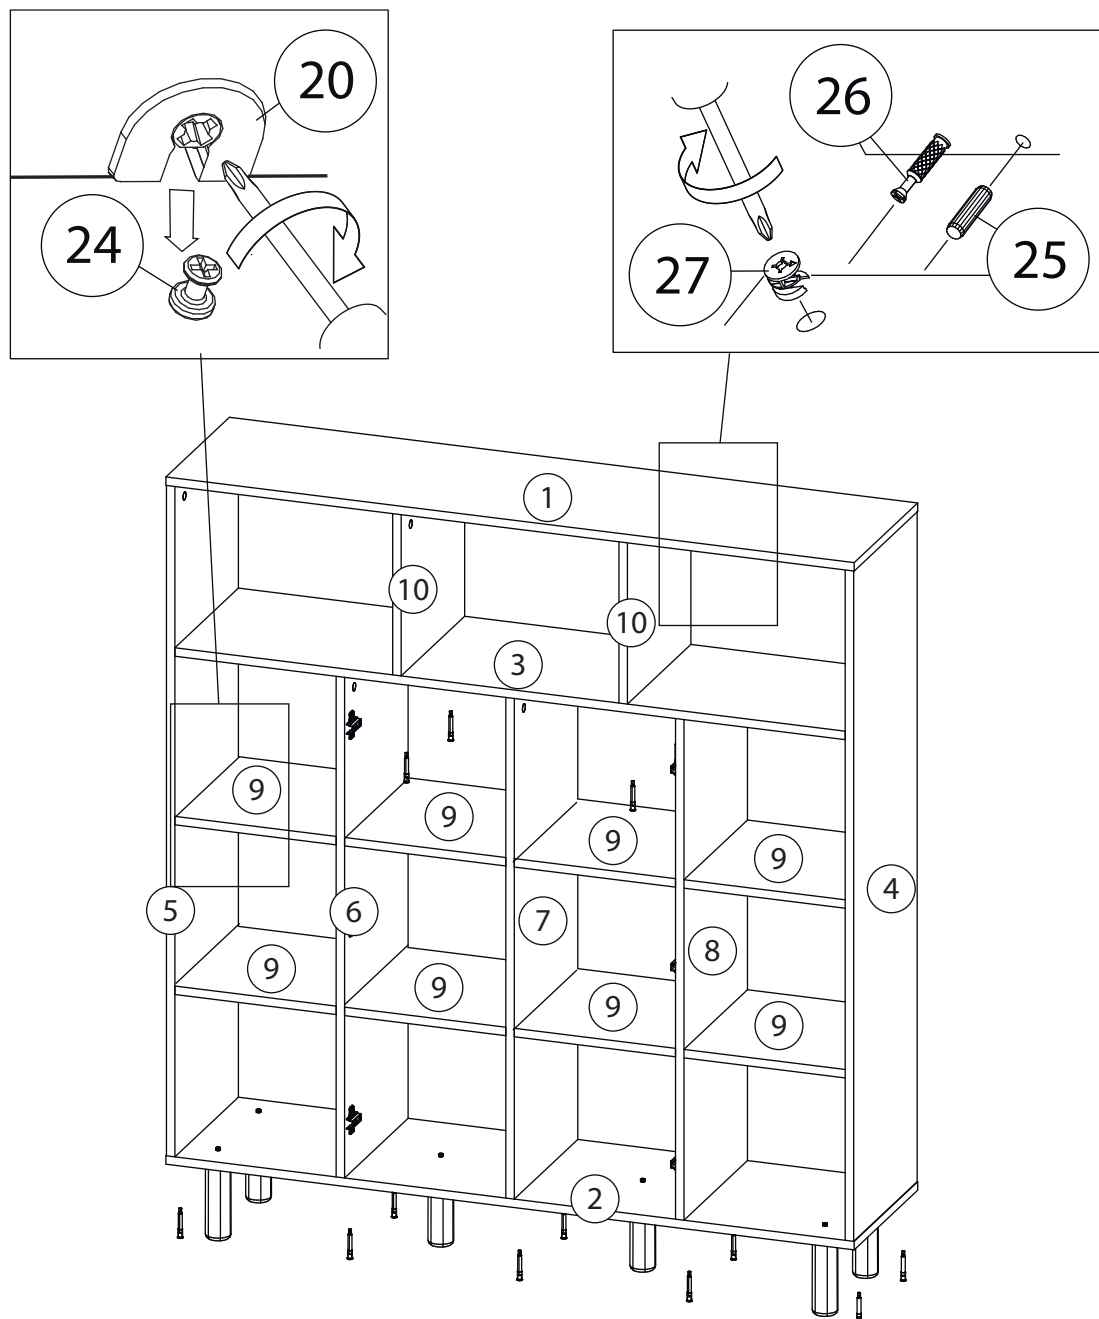




6

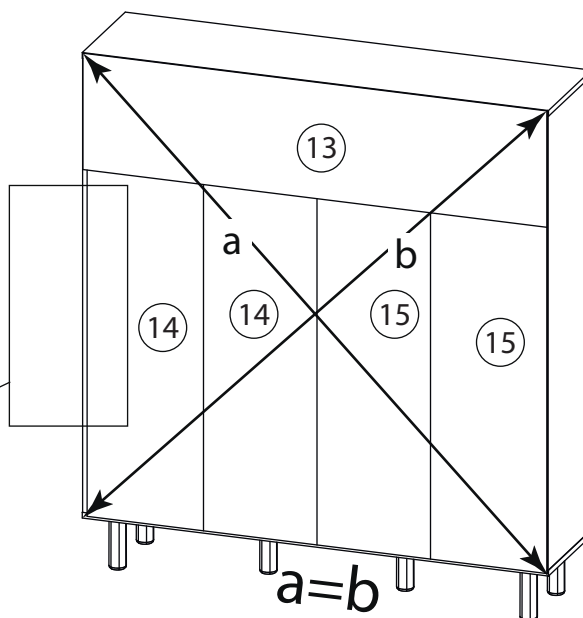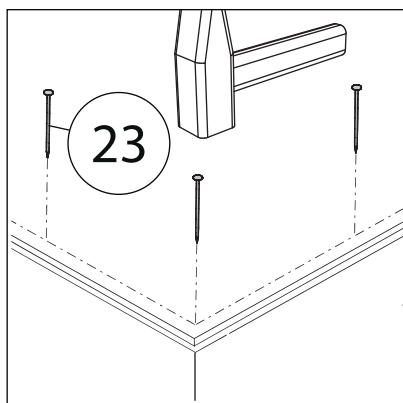

7

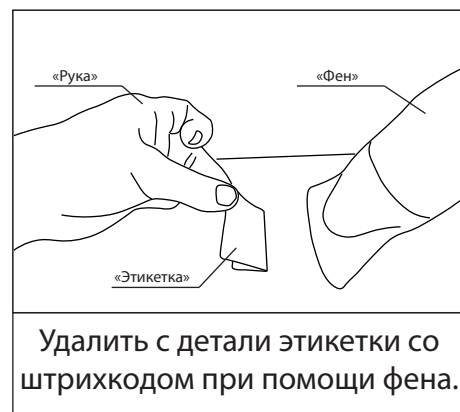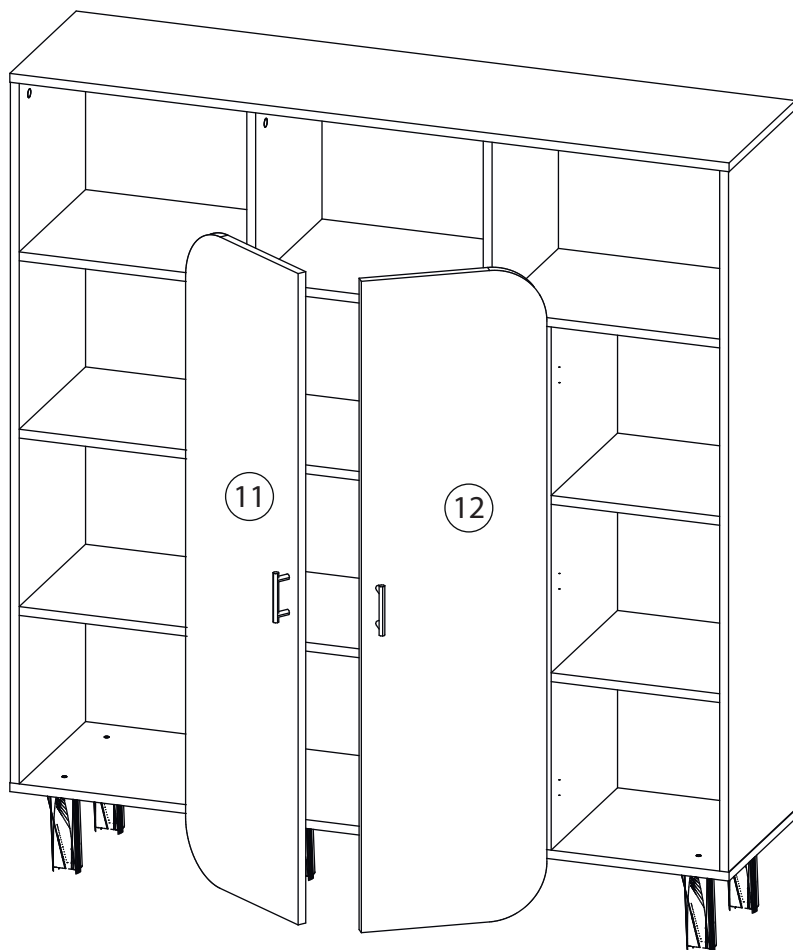

Заклеить технические отверстия заглушками.

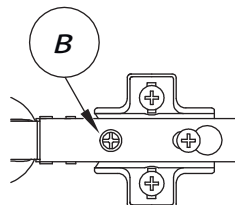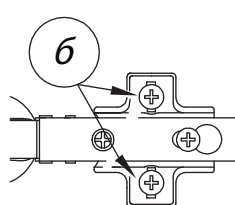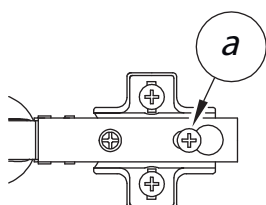

Регулировка петель

а - регулировка расстояния между дверью и корпусом
б - регулировка положения двери по-вертикали
в - регулировка положения ТТдвери по-горизонтали