


Инструкция по сборке


Модерн

Стенка 2






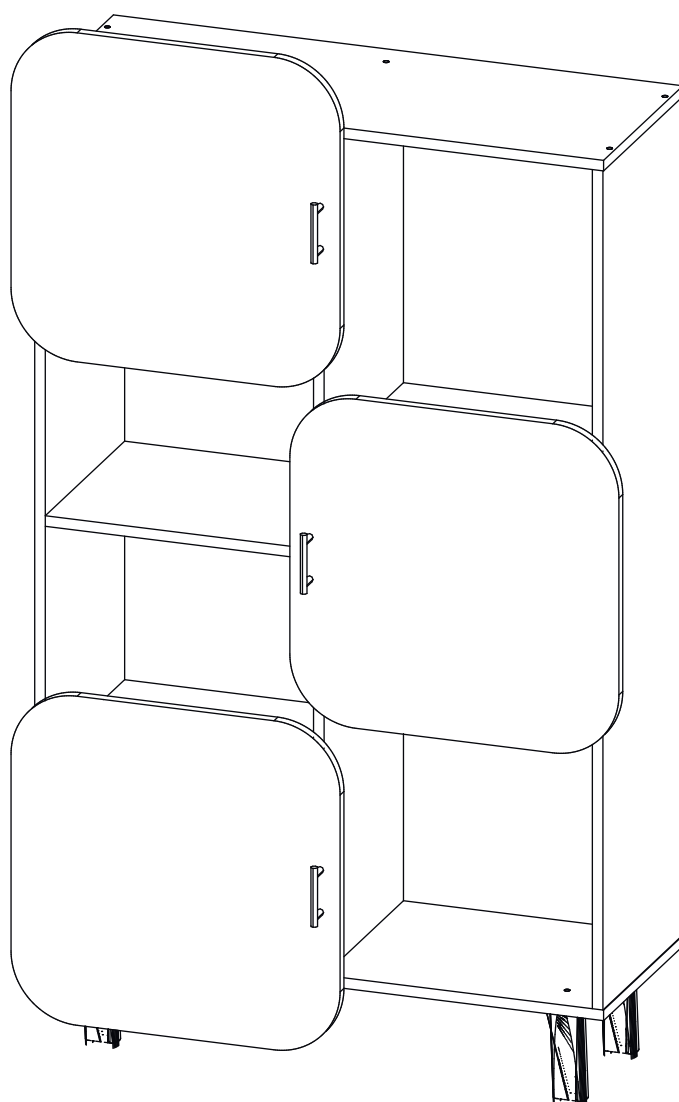


Детали




Поз.	Наименование	Кол-во	Длина	Ширина
1	Перегородка	1	1270	330
2	Бок правый	1	1270	330
3	Бок левый	1	1270	330
4	Дно	1	862	330
5	Крыша	1	862	330
6	Полка	5	406	330
7	Дверь1	1	498	498
8	Дверь2	1	498	498
9	Дверь1	1	498	498 </td
10	з/с	2	1298	426

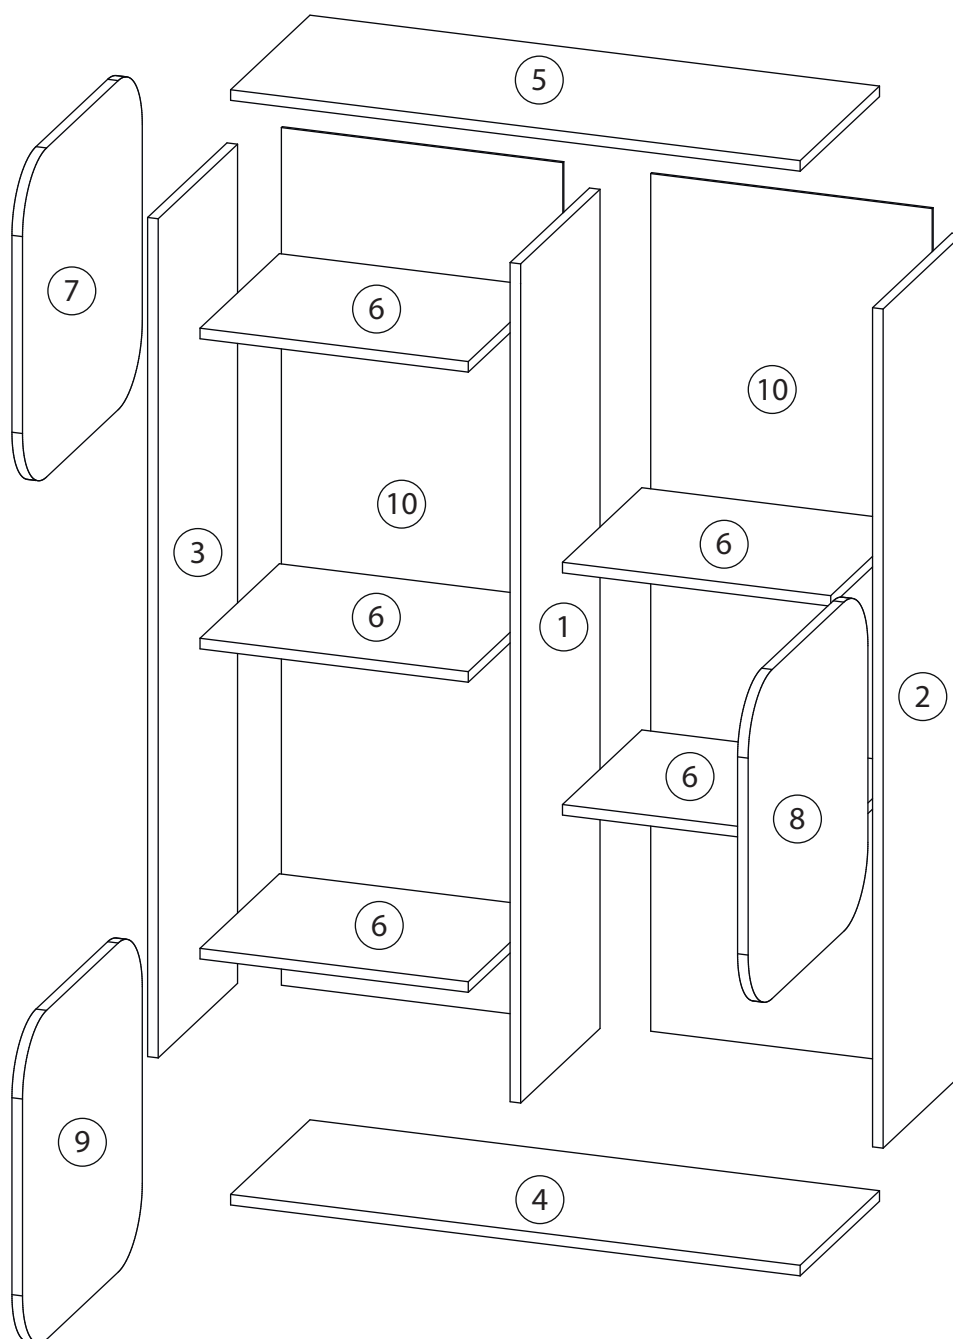



Фурнитура

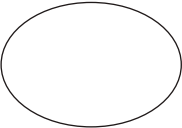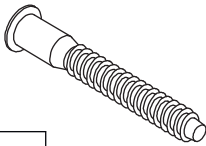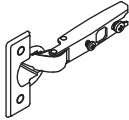 11	 12	 13	 14	 15
<u>Заглушка</u> <u>Ø13</u>	<u>Заглушка</u> <u>Ø17-20</u>	<u>Евровинт 6,3x13</u>	<u>Евровинт 7x50</u>	<u>Стяжка VB35</u>
 16	 17	 18	 19	
<u>Саморез 3,5x16</u>	<u>Петля накладная</u>	<u>Гвоздь 1,6x25</u>	<u>Винт для стяжки</u> <u>VB35</u>	



1

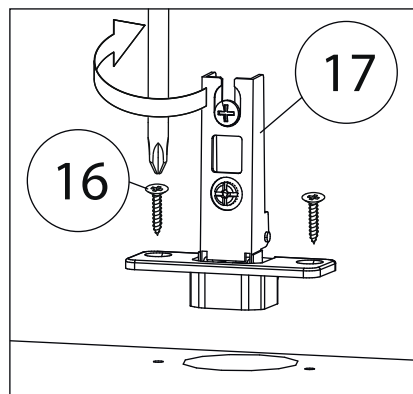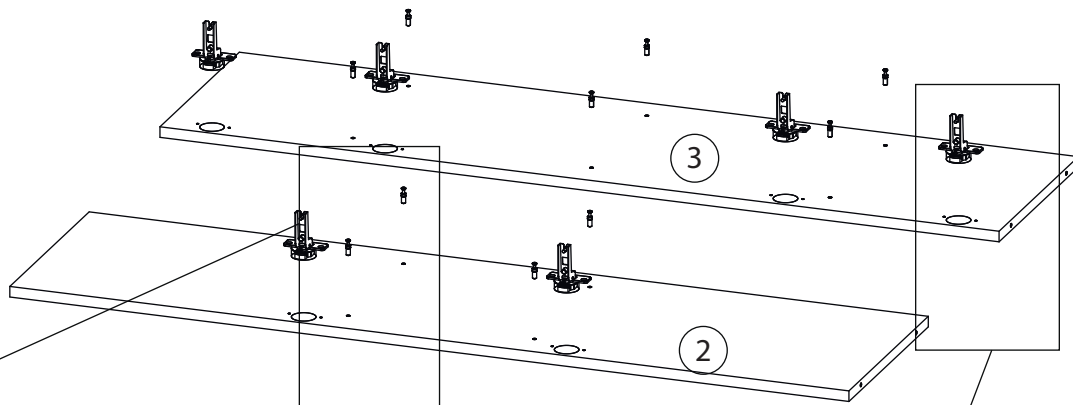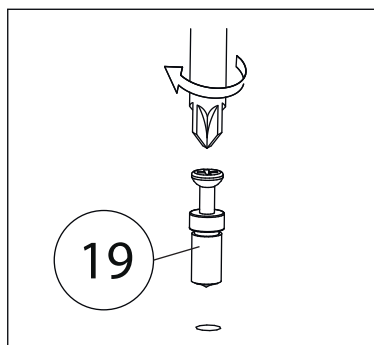


2

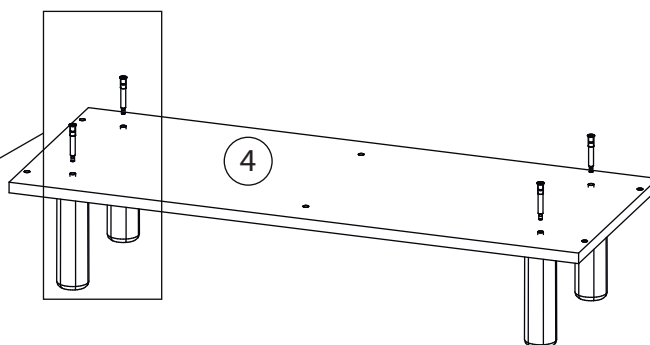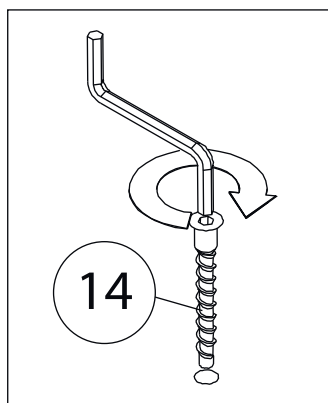


3

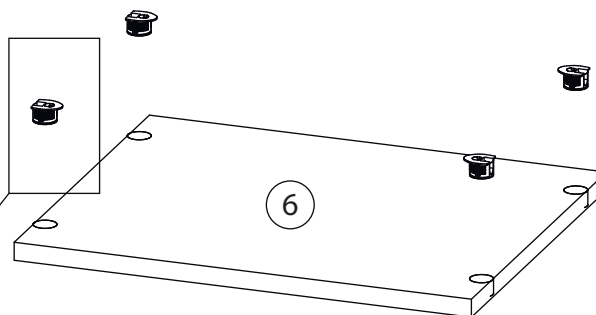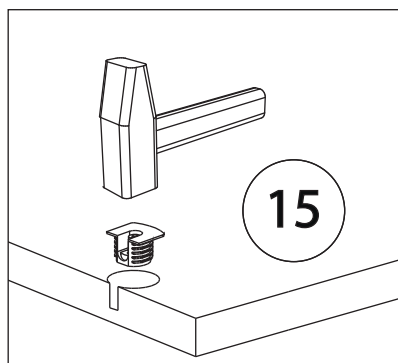



4

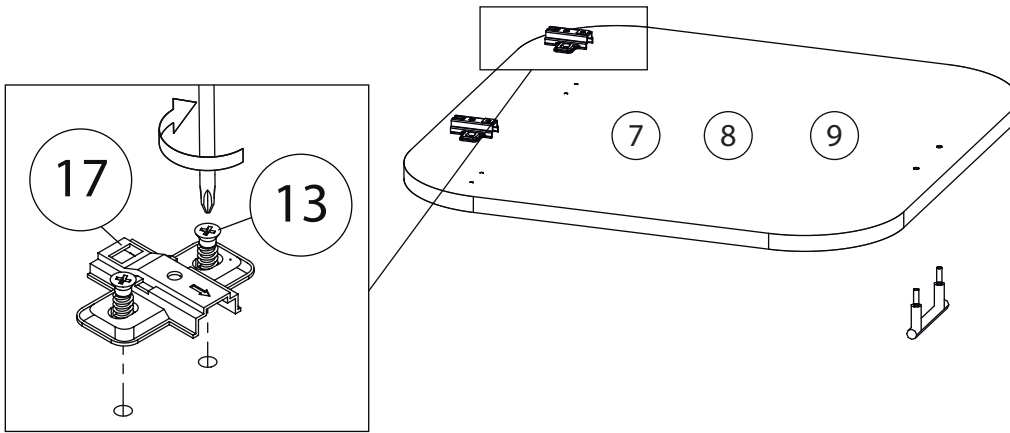



5


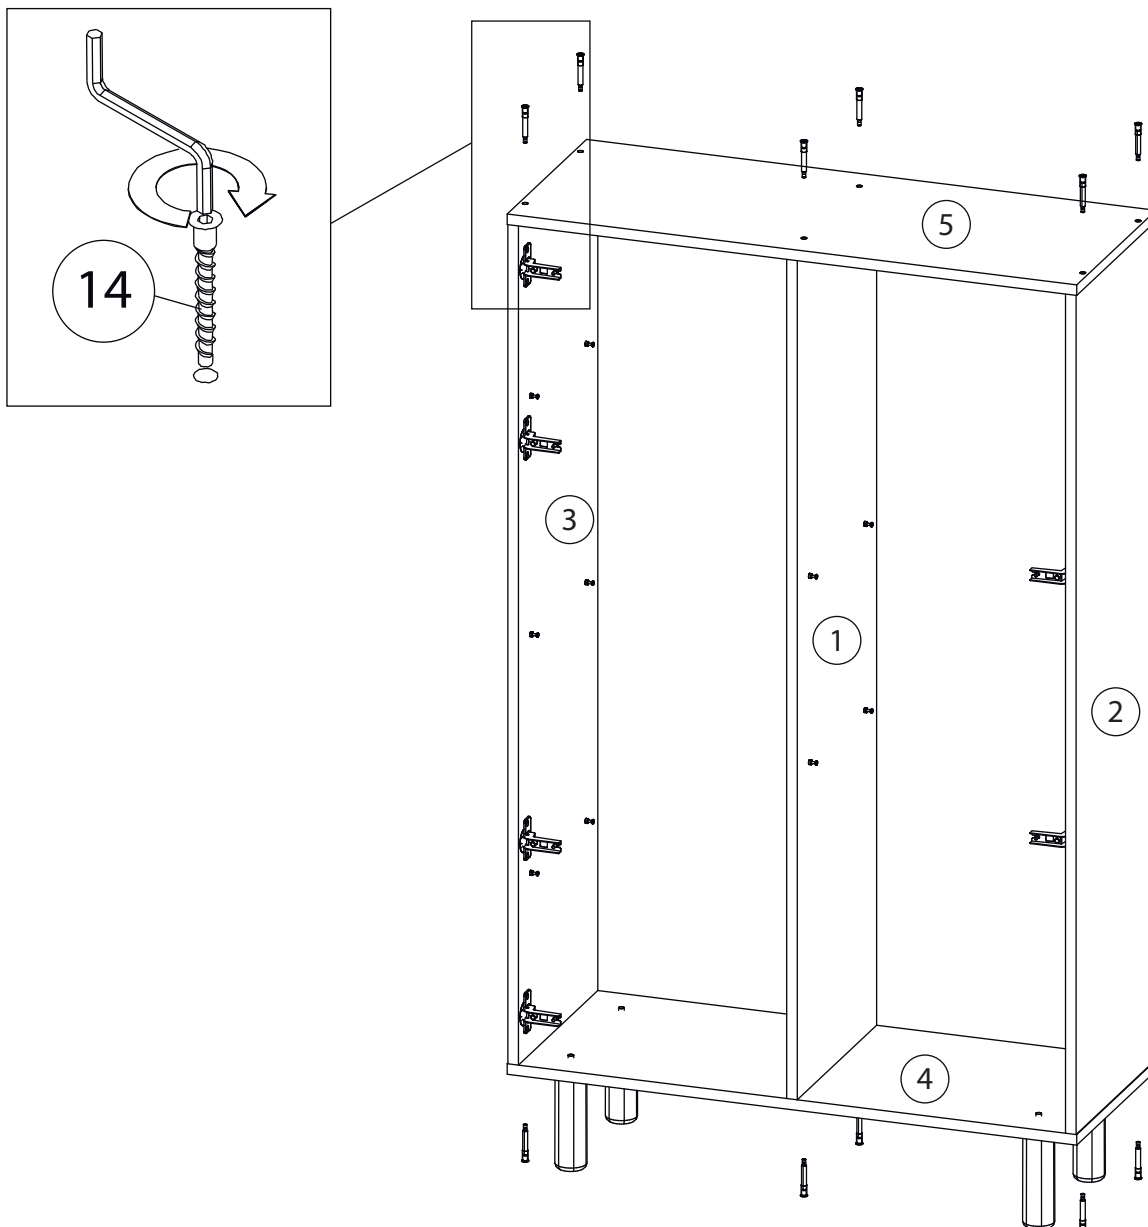


6


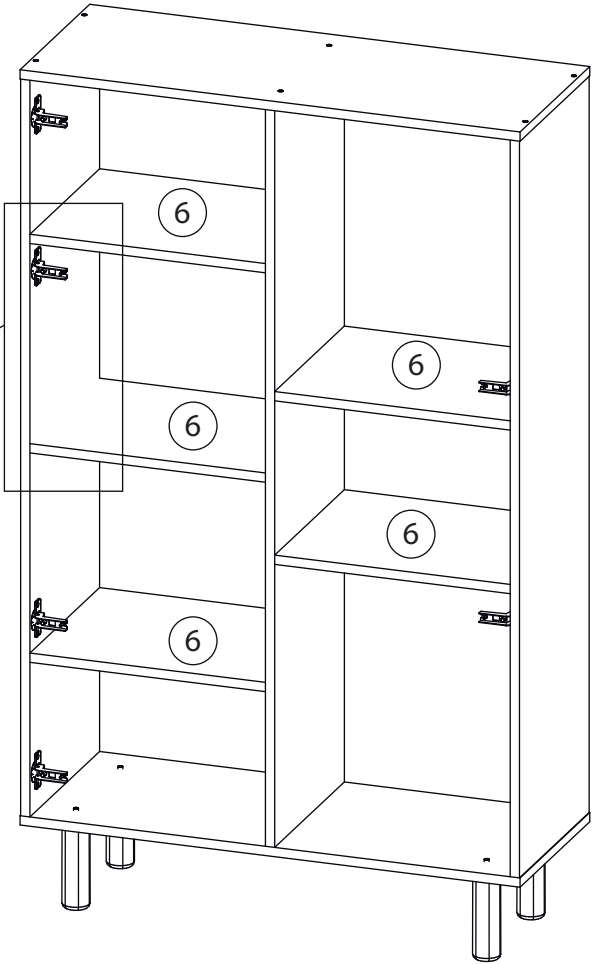
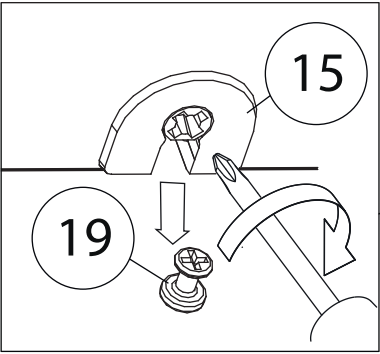


7

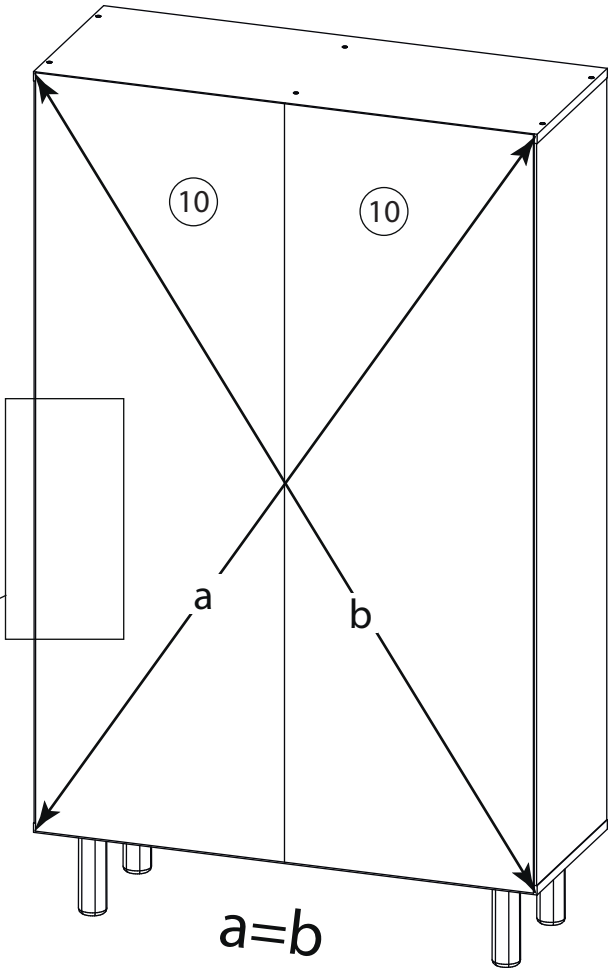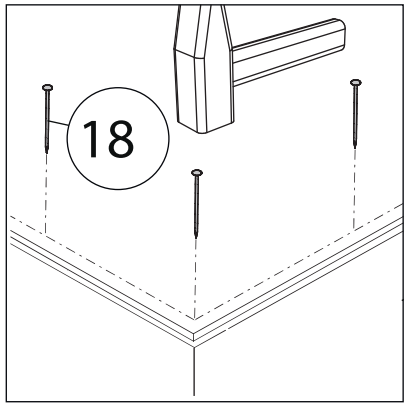

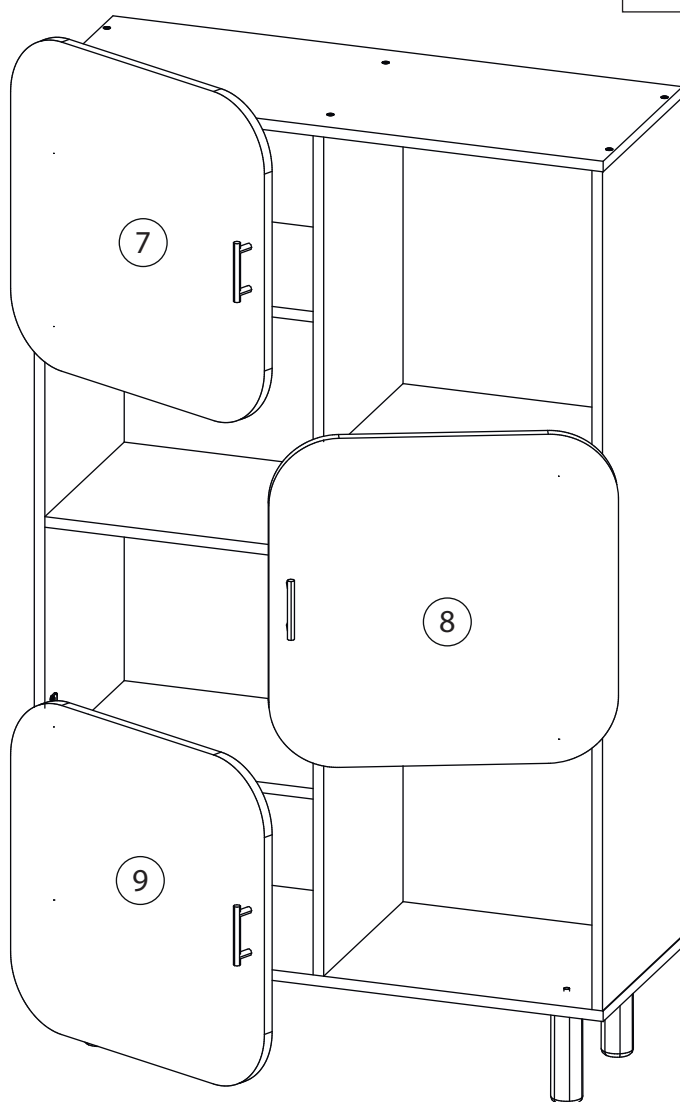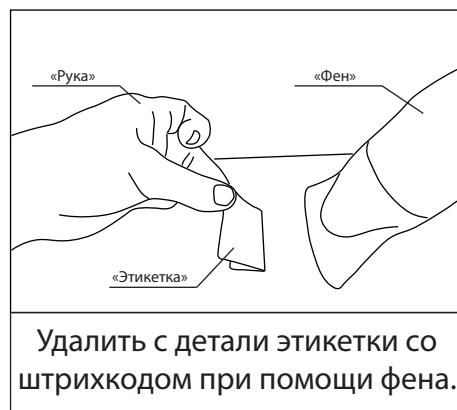

Заклеить технические отверстия заглушками.

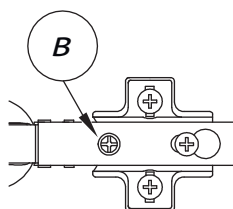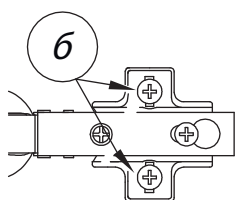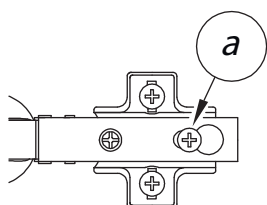

Регулировка петель

а - регулировка расстояния между дверью и корпусом
 б - регулировка положения двери по-вертикали
 в - регулировка положения ТТдвери по-горизонтали